



CARGO MAX SPARE TIRE CARRIER *ASSEMBLY INSTRUCTIONS P/N 550-70049-00*

SPARE TIRE CARRIER INSTALLATION

TOOLS REQUIRED:

2 - 9/16" SOCKETS/SOCKET & WRENCH
1 - 13/16" SOCKET
1 - TORQUE WRENCH

NOTE: READ THESE INSTRUCTIONS CAREFULLY AND COMPLETELY AND UNDERSTAND ALL ASSEMBLY AND ADJUSTMENT PROCEDURES PRIOR TO PERFORMING THE INSTALLATION AND MAKING ANY ADJUSTMENTS.



PARTS INCLUDED IN KIT:

ITEM	P/N	DESCRIPTION	QTY
1	150-01601-00	SPARE TIRE CARRIER	1
2	001-70119-00	BOLT, 38" x 4"	2
3	001-76071-00	NUT, 3/8" NYLOCK	2
4	005-08200-00	NUT, LUG 1/2"-20	2

INSTRUCTION P/N 650-70049-00

Page 1 of 2 - ISSUED: 1/16

Updated: 8/7/18

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

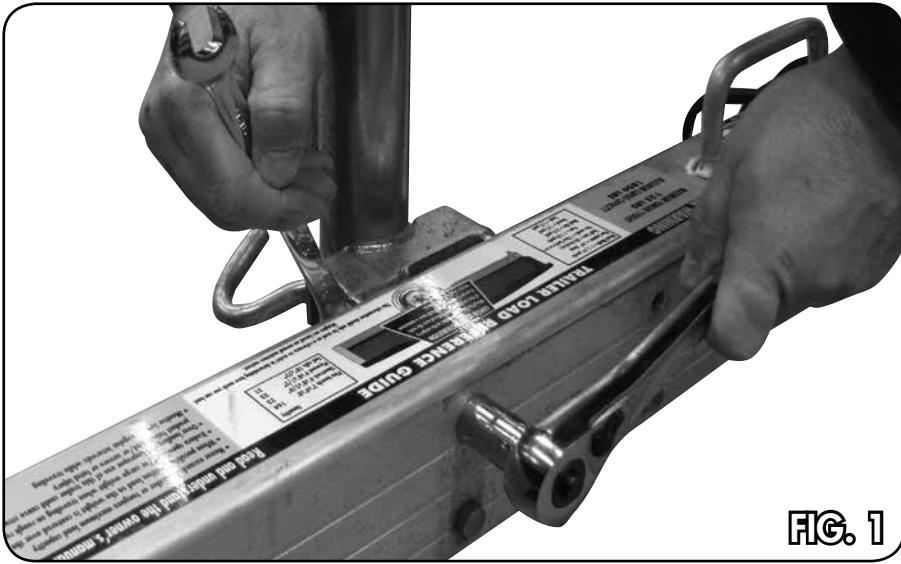


FIG. 1

1. REMOVE THE TOP TWO 3/8" BOLTS FROM THE TONGUE JACK AS SHOWN IN FIGURE 1.

2. INSERT THE TWO 3/8" X 4" BOLTS INTO THE CARRIER BRACKET AND PLACE THE BRACKET ON THE TONGUE WITH THE BOLTS THROUGH THE TOP TONGUE JACK BOLT HOLES AS SHOWN IN FIGURE 2.

3. THREAD THE TWO 3/8" NYLOCK NUTS ONTO THE BOLTS AND TORQUE TO 35 FT/LBS AS SHOWN IN FIGURE 3.

4. PLACE THE RIM AND TIRE ON THE STUDS AS SHOWN IN FIGURE 4 AND THREAD TWO LUG NUTS ONTO THE STUDS (CONICAL SIDE OF NUT TOWARD RIM) AND TORQUE TO 50 FT/LBS.

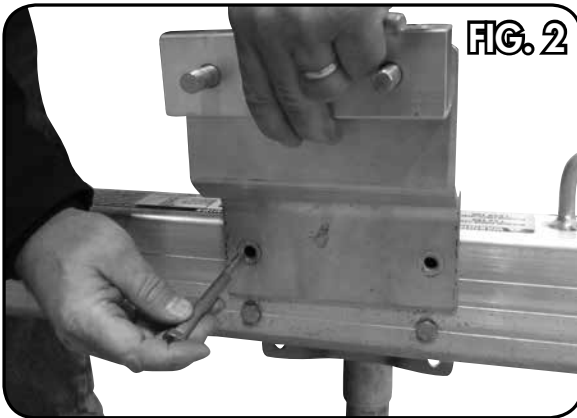


FIG. 2

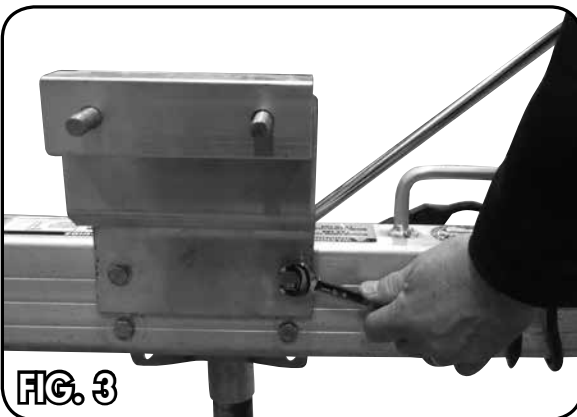


FIG. 3



FIG. 4