
SAFETY QUICK CONNECT

ASSEMBLY INSTRUCTIONS 4' x 8', 8' x 8' and 2' x 10' Docks



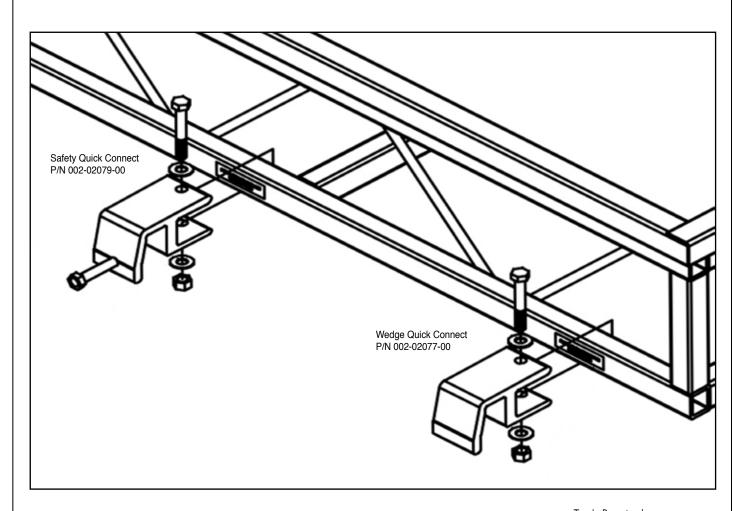

Tools Required:


- (2) 9/16" Wrenches/Sockets
- Tape Measure
- Torque Wrench

INSTRUCTION P/N: 602-02079-00

ISSUED: 07/23/13

REV: 2/22

©Floe International, Inc. 48473 State Hwy. 65 McGregor, MN 55760 www.floeintl.com All rights reserved.

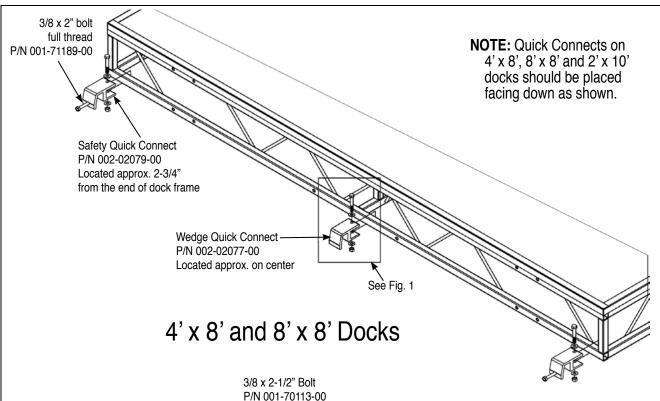

3/8" Flat Washers
P/N 001-71017-00

Wedge Quick Connect
P/N 002-02077-00

Fig. 1

3/8" Aluminum Nut
P/N 001-76349-00

- Attach quick connects as shown. Center Quick Connects on decals on the 2' x 10' docks. Attach using the 2-1/2" bolt, nut, and flat washer provided.
- Note: The 2' x 10' Dock uses (2) Safety Quick Connects only. The 4' x 8 and 8' x 8' uses (2) Safety Quick Connects, and (1) Wedge Quick Connect.
- Position Quick Connect so it doesn't interfere with webbing on docks.
- Slide Quick Connect to widest portion of dock until it hits upright and move back 1/8" so it isn't touching the webbing.
- Square Quick Connects to dock frame before tightening 2-1/2" bolt for ease of fit to next section.

