
FLOE FLOATING DOCK FLAG POLE ATTACHMENT KIT



ASSEMBLY INSTRUCTIONS

KIT P/N 510-02336-00

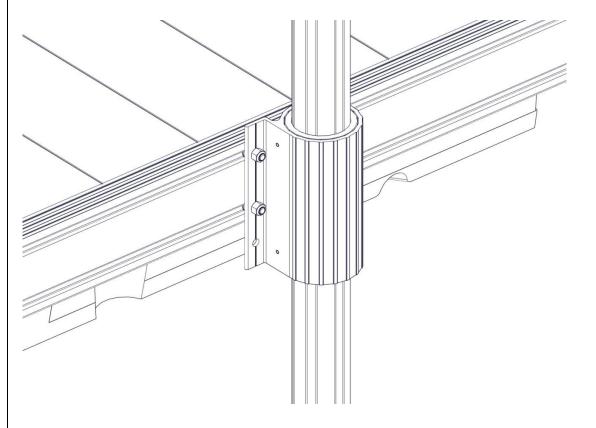

*DOCK SECTION NOT INCLUDED

NOTE:

FLAG POLE IS SOLD SEPARATELY. REFER TO THE INSTRUCTIONS INCLUDED WITH THE KIT.

INSTRUCTION P/N: 610-02336-00 RELEASED 5/24/22

SHEET 1 OF 4

TOOLS REQUIRED

-9/16" SOCKET/WRENCH -TORQUE WRENCH


> © Manufactured by: Floe International Inc. 48473 State Hwy. 65 McGregor, MN 55760 www.floeintl.com


BILL OF MATERIALS

| P/N 510-02336-00 | | KIT, FLAG POLE MTG. HRDW. FLOATING | |
|------------------|--------------|------------------------------------|-----|
| NUMBER | PART NUMBER | DESCRIPTION | QTY |
| 1 | 001-70105-00 | HHCS, 3/8-16 X 1″ 18-8 SS | 4 |
| 2 | 001-71017-00 | FLAT WASHER, 3/8" SAE SS 18-8 | 4 |
| 3 | 001-76071-00 | NUT, NYLOCK 3/8-16 ALUM. | 4 |

2

(b)






0



SHEET 2 OF 4

ASSEMBLY

FIRST, DETERMINE WHERE THE FLAG POLE WILL BE INSTALLED ON THE DOCK SYSTEM. PLACE A 3/8" WASHER ONTO EACH OF THE (4) 3/8" X 1" BOLTS (FIGURE 1.1), THEN INSERT THE HEX HEAD AND WASHER INTO THE TRACK ON THE DOCK SIDE (FIGURE 1.2).

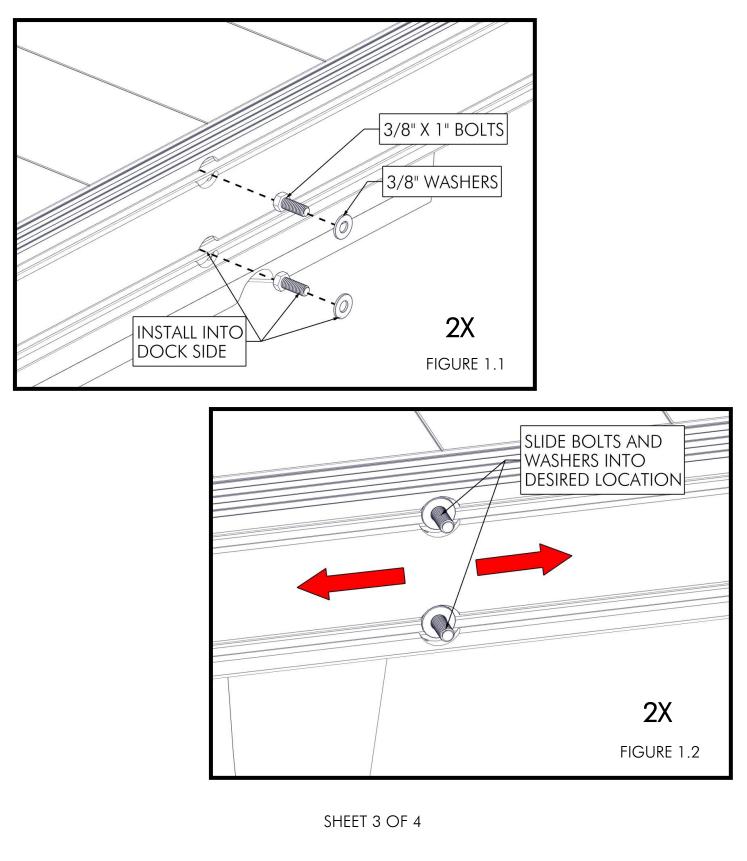

PLACE A 3/8" NYLOCK NUT ONTO EACH BOLT (FIGURE 1.4). WHILE ENSURING THAT THE POCKETS ARE PERPENDICULAR TO THE DOCK SURFACE, TORQUE THE NUTS TO 20 FT-LB (FIGURE 1.5). REFER TO THE FLAG POLE INSTRUCTIONS FOR FURTHER INFORMATION.

