

FLOE DOCK SIDE QUICK-ATTACH SECTIONAL RAMP BRACKETS



FLOE KIT P/N 510-02576-00


ASSEMBLY INSTRUCTIONS

BOM/EXPLODED VIEW

P/N 510-02576-00			
Number	Part Number	QTY.	Description
1	001-70105-00	2	HHCS, 3/8-16 X 1" SS
2	002-00155-00	2	CONNECT, QUICK ATT. RAMP - 2"

TOOLS REQUIRED

- 9/16" WRENCH/SOCKET
- TORQUE WRENCH

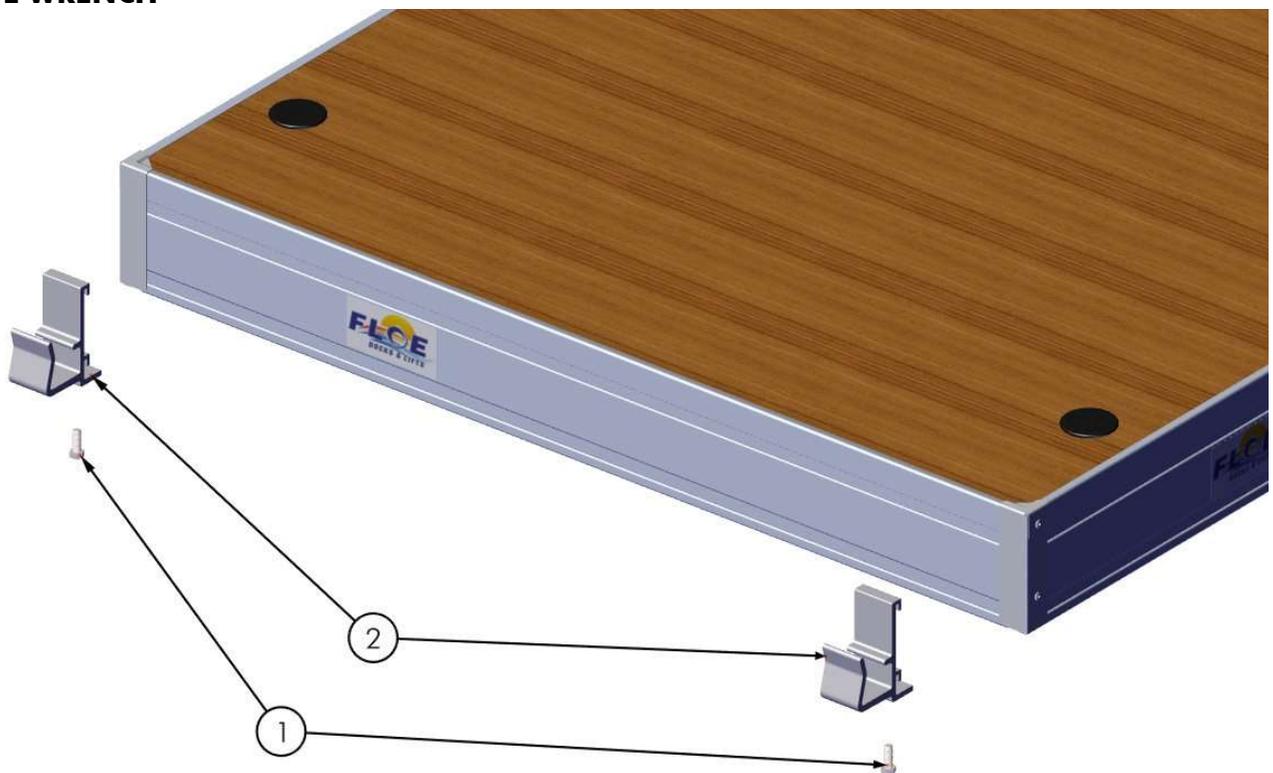

STEP 1

PLACE BRACKETS INTO DOCK SIDE.



STEP 2

INSERT 3/8-16 x 1" BOLTS INTO THE BOTTOM OF EACH BRACKET. TORQUE TO 6 FT/LBS MAXIMUM.



STEP 3

ALIGN DOCK RAMP (NOT INCLUDED) OVER BRACKETS.

