


# FLOE QUICK ATTACH ROLL IN FLAG POLE BRACKET

## ASSEMBLY INSTRUCTIONS

KIT P/N 510-02603-00

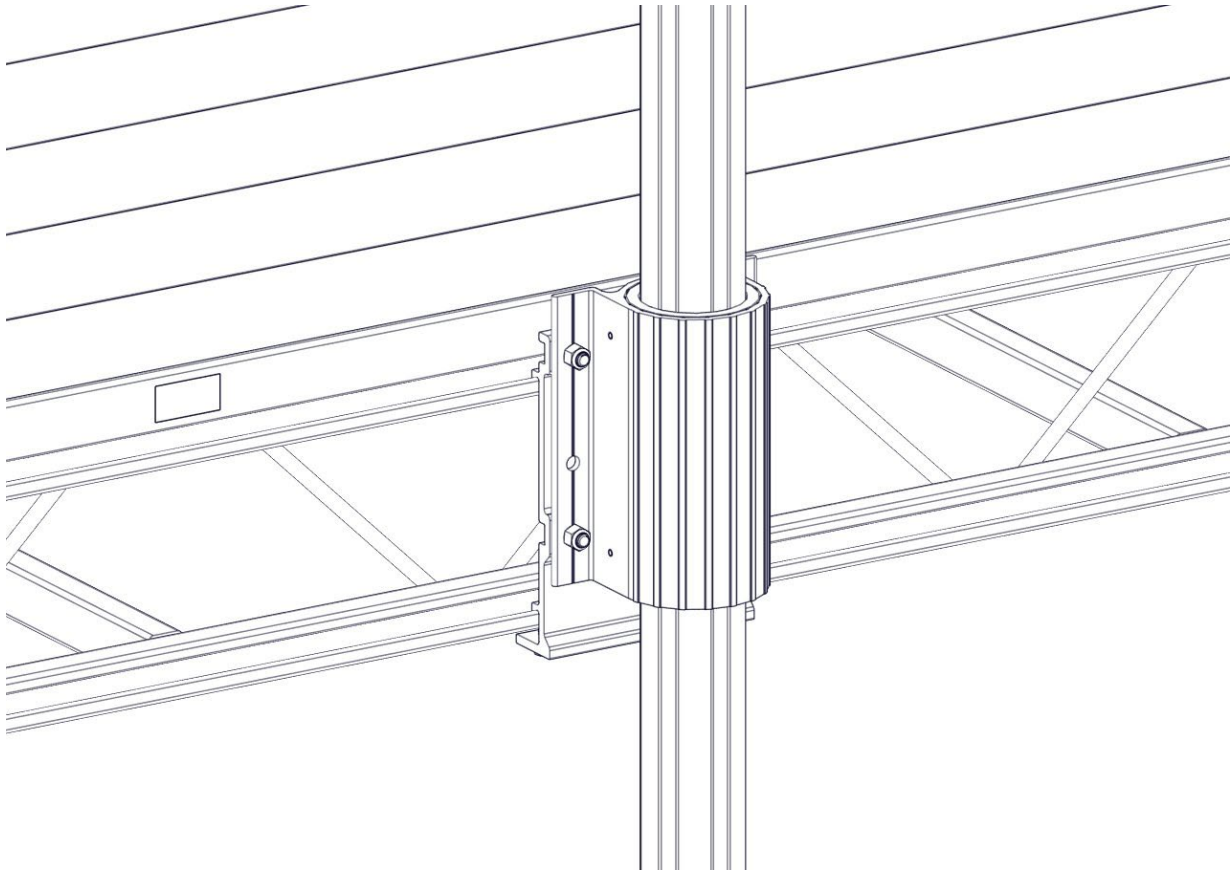

\*DOCKS, LEGS, FLAG POLE, AND FLAG POLE POCKET  
NOT INCLUDED


TOOLS REQUIRED  
-9/16" SOCKET/WRENCH  
-TORQUE WRENCH

### NOTE:

REFER TO FLAG POLE INSTRUCTIONS TO COMPLETE INSTALLATION



**BILL OF MATERIALS/EXPLODED VIEW**

P/N 510-02603-00	KIT, QA ROLL IN BRKT. FLAG POLE		
NUMBER	PART NUMBER	QTY.	DESCRIPTION
1	001-70105-00	6	HHCS, 3/8-16 X 1" 18-8 SS
2	001-76071-00	4	NUT, 3/8-16 ALUM.
3	002-00279-00	1	BRACKET, QUICK ATT. ROLL IN FLAG POLE – 6.312"


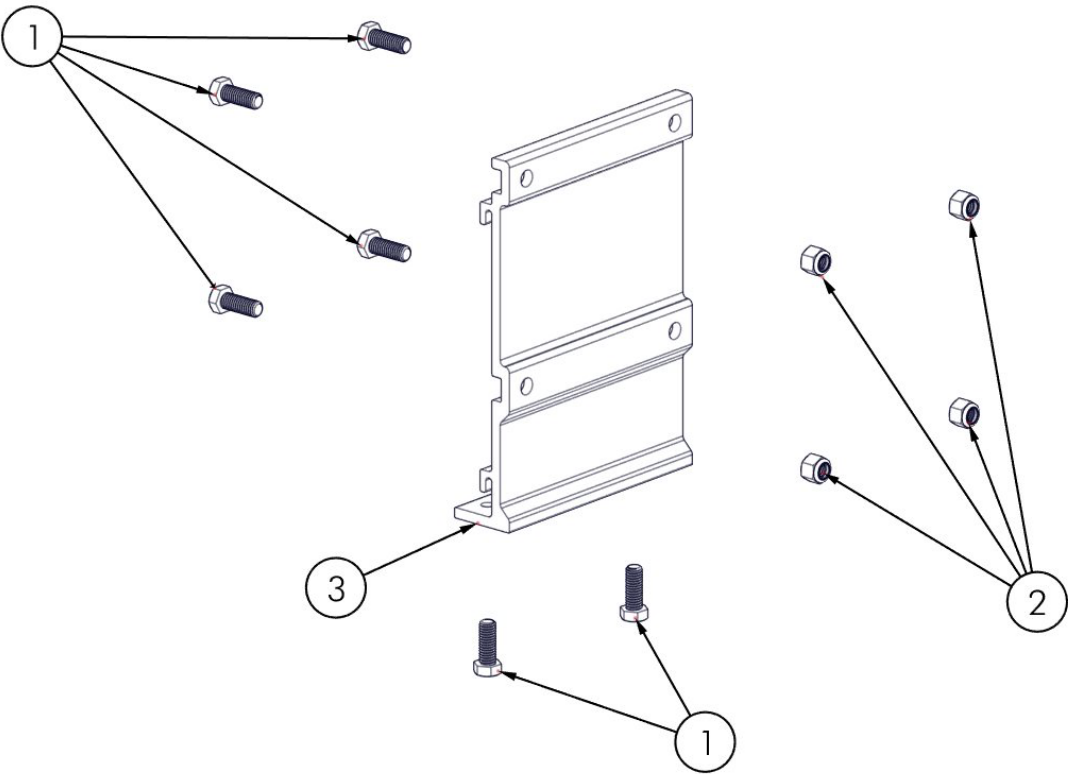


## ASSEMBLY



INSTALL (4) 3/8" X 1" BOLTS INTO THE BRACKET (FIGURE 1.1). PLACE THE BRACKET INTO THE DOCK SIDE IN THE DESIRED LOCATION (FIGURE 1.2).

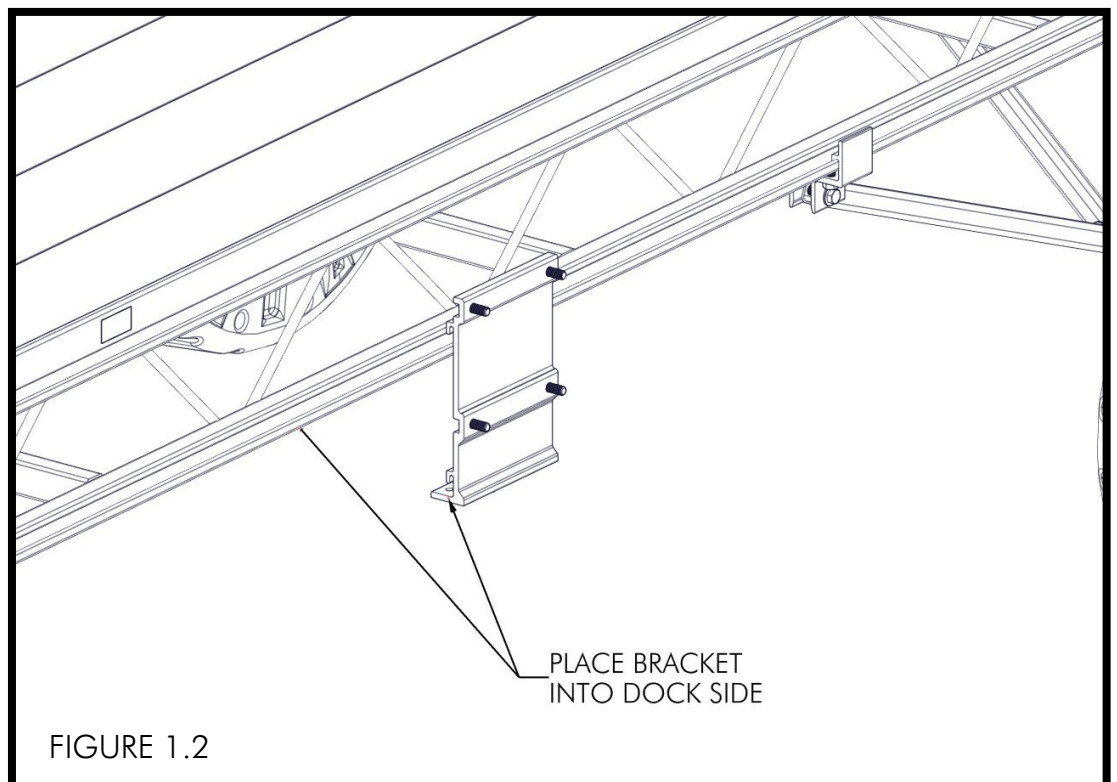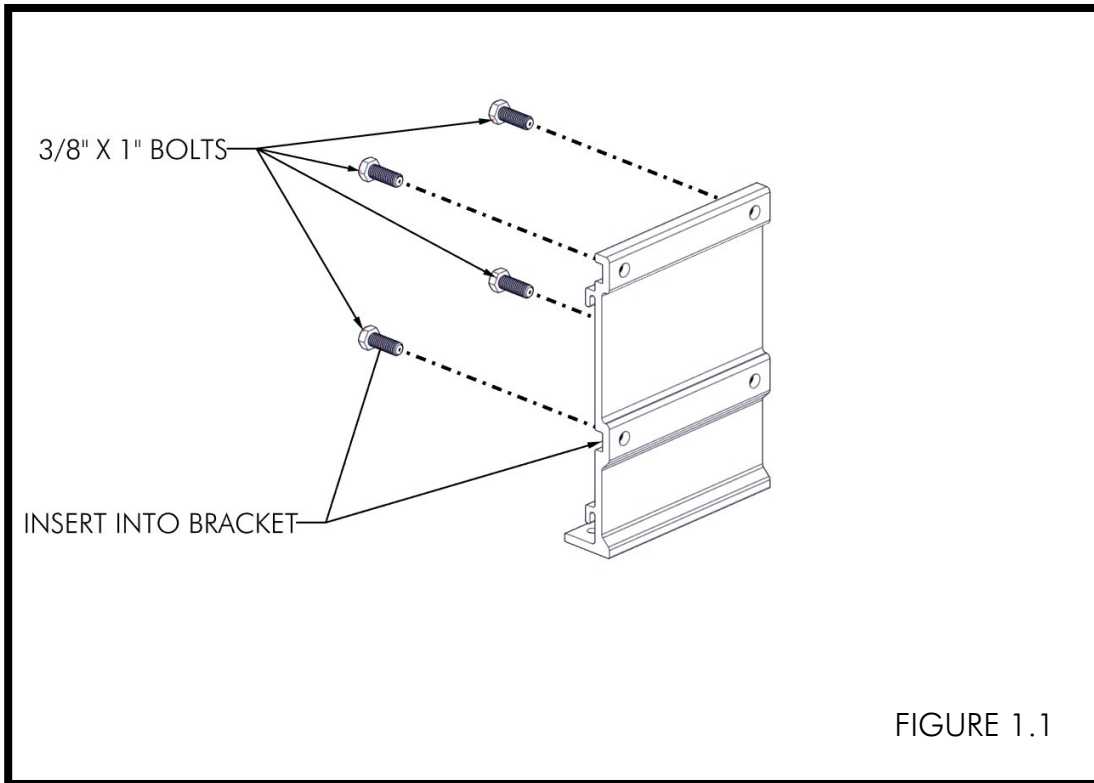

INSERT (2) 3/8" X 1" BOLTS INTO THE BOTTOM OF EACH BRACKET (FIGURE 1.3) AND TORQUE TO 6 FT-LB MAXIMUM (FIGURE 1.4).

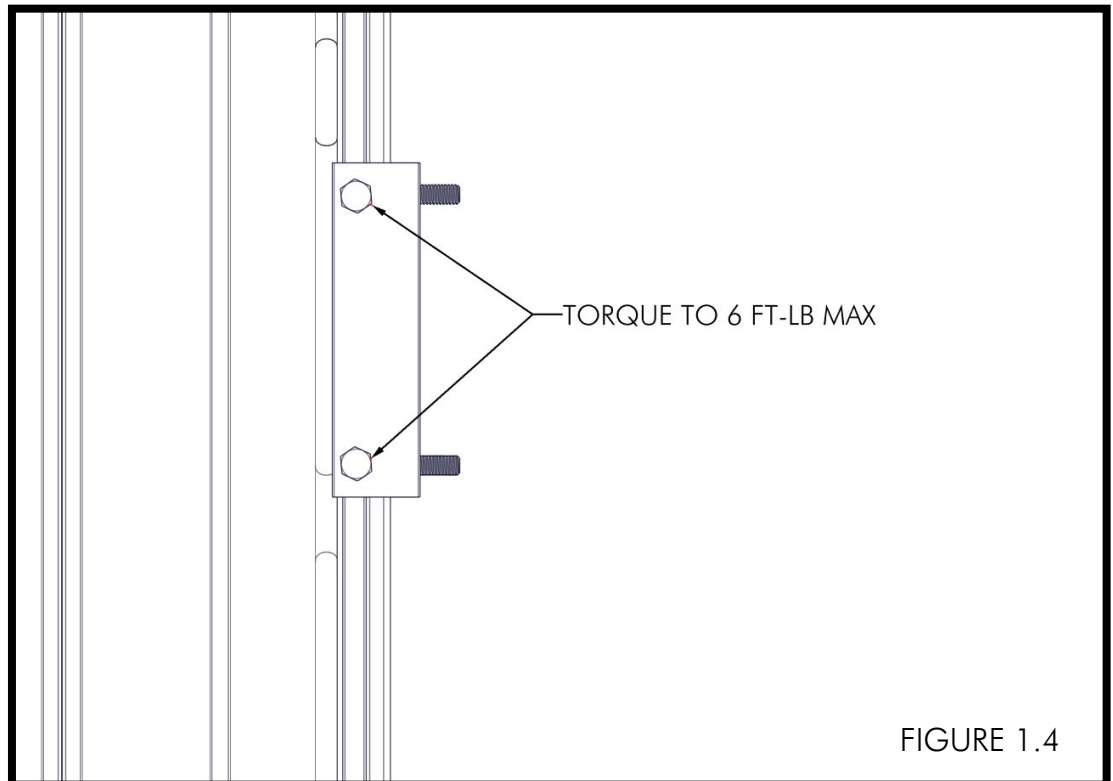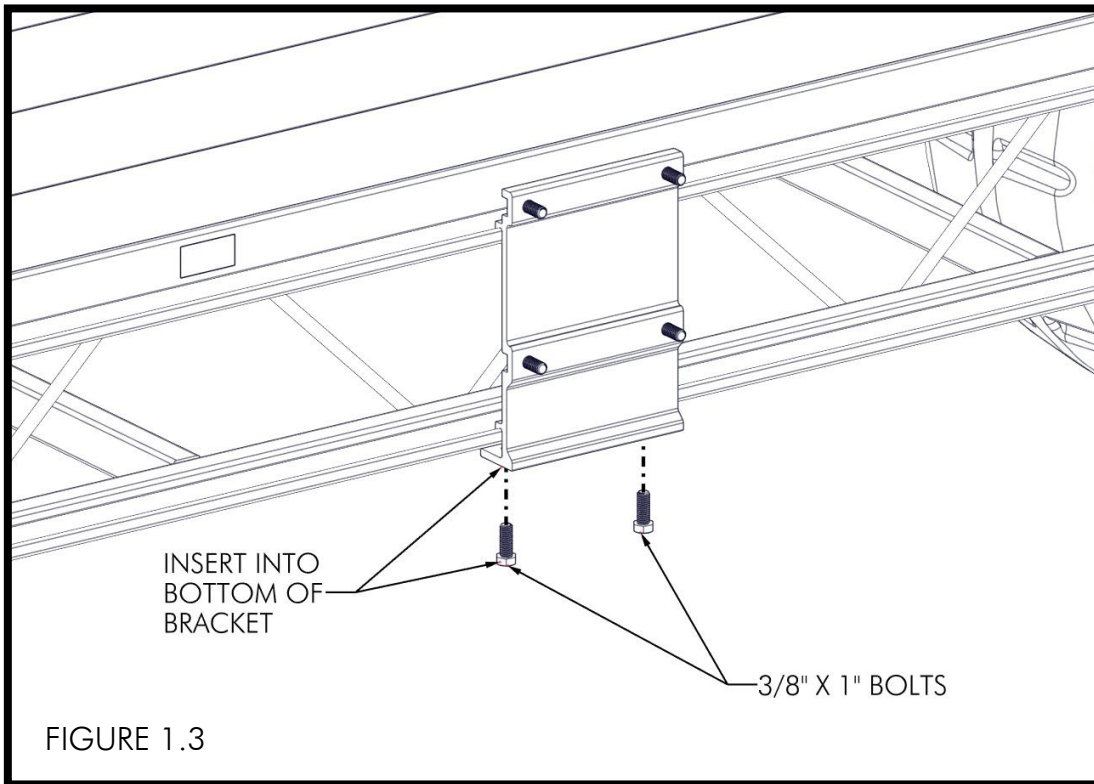

INSTALL THE POCKET (**SOLD SEPARATELY**) ONTO THE BOLTS AND ATTACH USING (4) 3/8" NYLOCK NUTS (FIGURE 1.5). TORQUE NUTS TO 35 FT-LB (FIGURE 1.6).

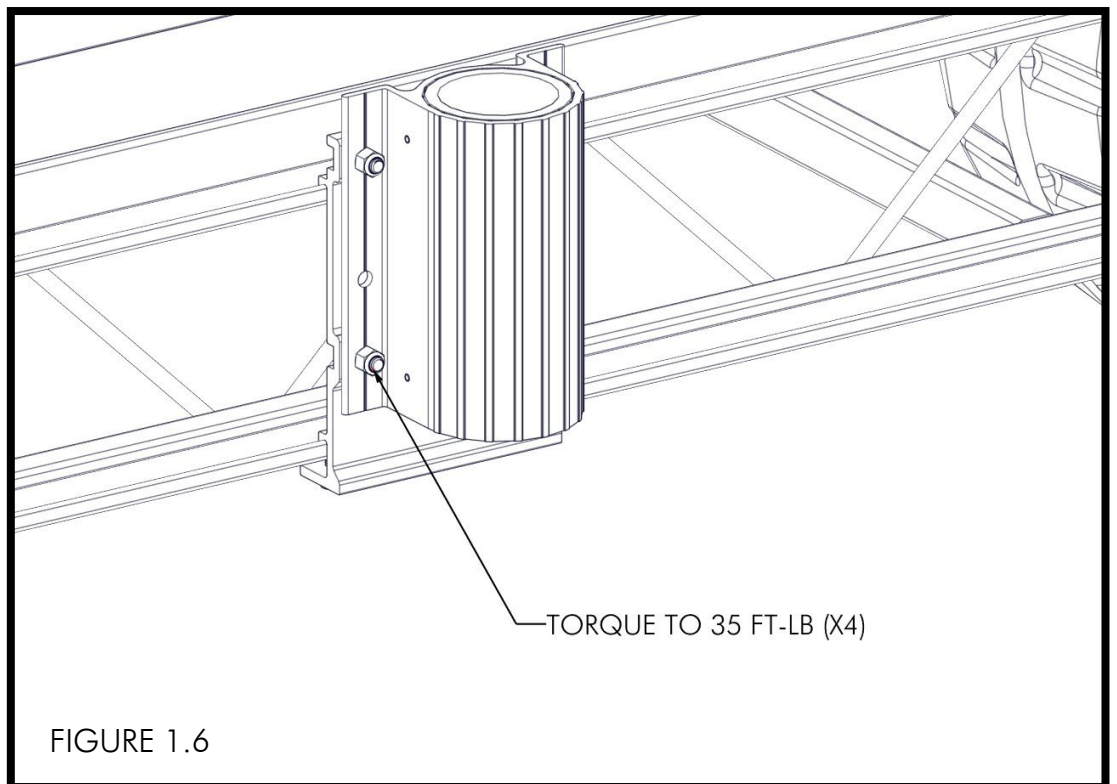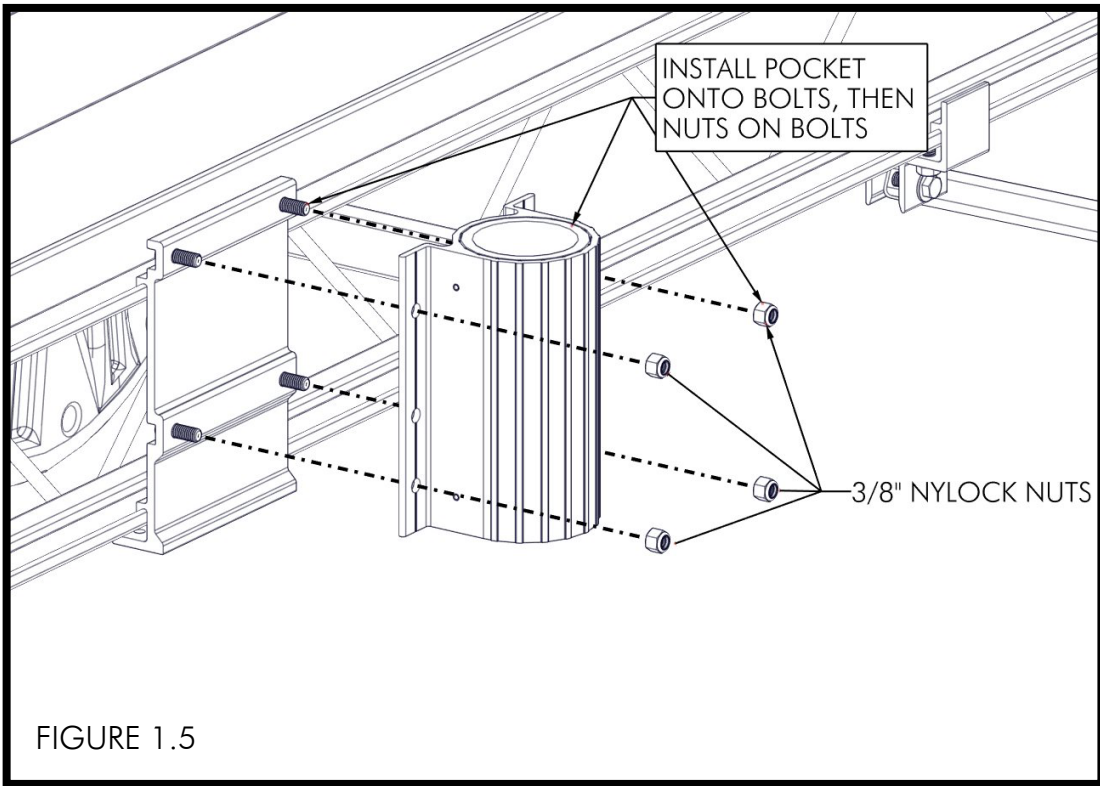

**NOTES**

**NOTES**

