


FLOE QUICK ATTACH ROLL IN 40" WELDED VERTICAL BUMPER

ASSEMBLY INSTRUCTIONS

KIT P/N 510-02606-00

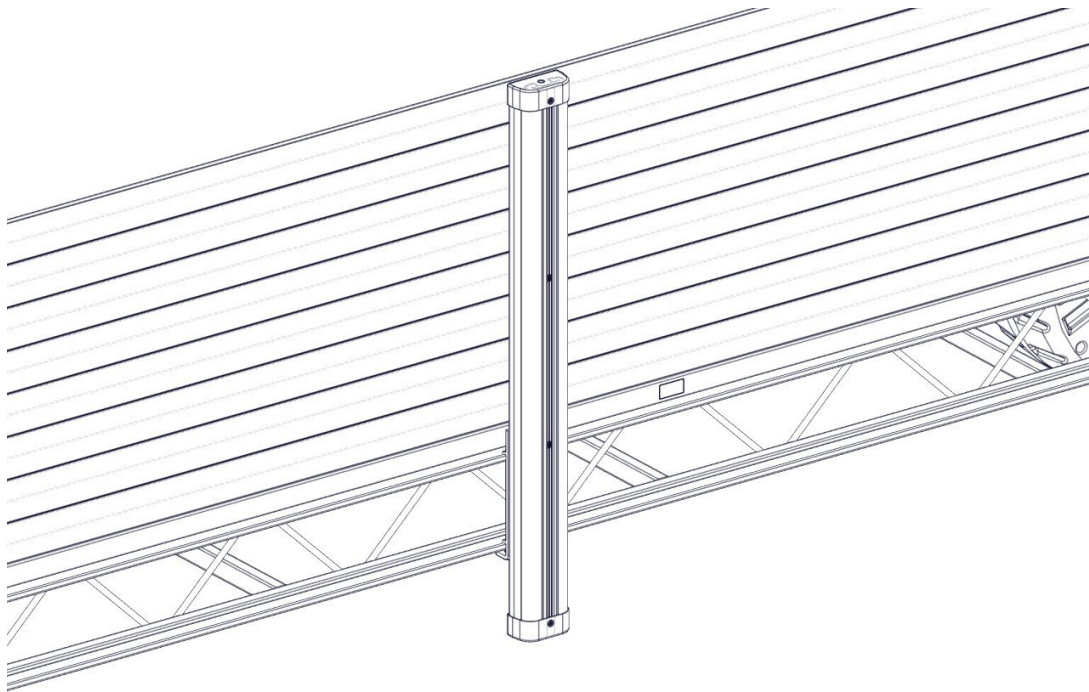

*DOCKS AND LEGS NOT INCLUDED

TOOLS REQUIRED
-9/16" SOCKET/WRENCH
-TORQUE WRENCH


INSTRUCTION P/N: 610-02606-00
RELEASED 6/30/22

SHEET 1 OF 4

© Manufactured by:
Floe International Inc.
48473 State Hwy. 65
McGregor, MN 55760
www.floeintl.com

BILL OF MATERIALS/EXPLODED VIEW

P/N 510-02606-00	BUMPER, 40" WELDED VERT. (GREY) QA ROLL-IN		
<u>NUMBER</u>	<u>PART NUMBER</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	001-70105-00	2	HHCS, 3/8-16 X 1" 18-8 SS
2	110-00288-00	1	ASS'Y, QA ROLL-IN VERT. BUMPER – 40" WELDED

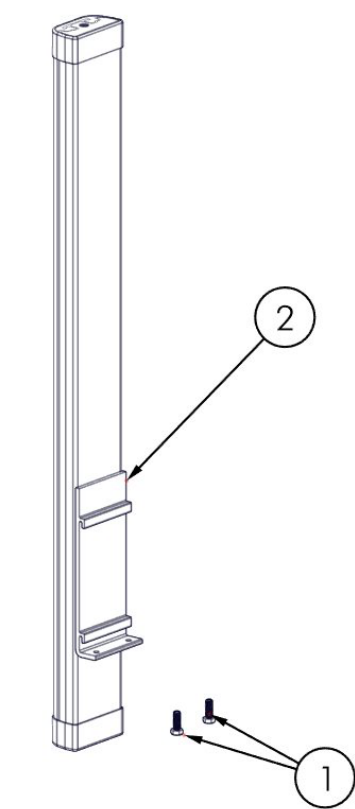

ASSEMBLY

INSTALL THE BUMPER IN THE DESIRED LOCATION IN THE DOCK SIDE (FIGURE 1.1). INSERT (2) 3/8" X 1" BOLTS INTO THE BOTTOM OF THE BRACKET WELDED TO THE BUMPER (FIGURE 1.2). TORQUE BOLTS TO 6 FT-LB MAXIMUM (FIGURE 1.3).

