


# **FLOE QUICK ATTACH ROLL-IN RAMP BRACKETS**

## **ASSEMBLY INSTRUCTIONS**

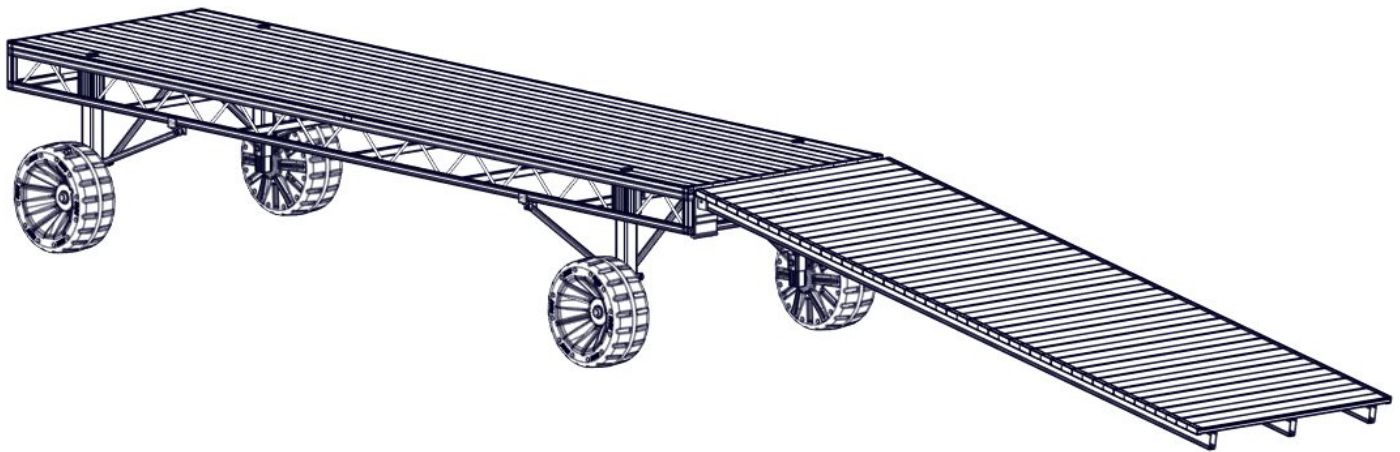

KIT P/N 510-02607-00




### **TOOLS REQUIRED**

- 9/16" SOCKET/WRENCH
- TAPE MEASURE
- TORQUE WRENCH

**\*DOCK, LEGS, AND RAMP NOT INCLUDED**



**BILL OF MATERIALS/EXPLODED VIEW**

P/N 510-02607-00	KIT, QA ROLL-IN RAMP BRACKETS		
<u>NUMBER</u>	<u>PART NUMBER</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	001-70105-00	4	HHCS, 3/8-16 X 1" 18-8 SS
2	110-00310-00	2	WELD'T, QA ROLL-IN RAMP BRACKET

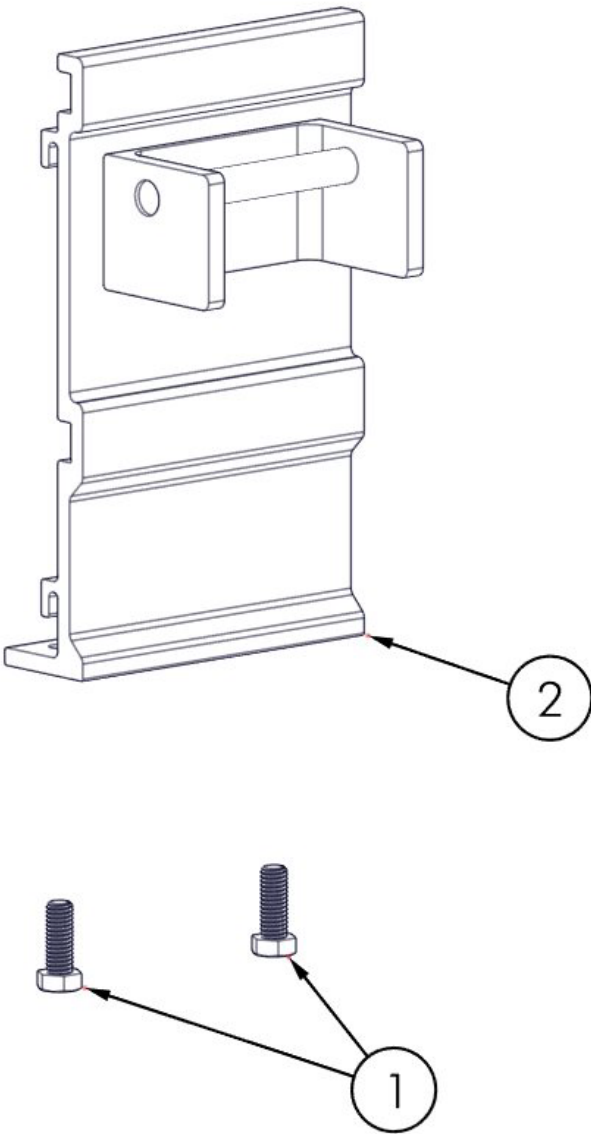

# INSTALLATION

INSTALL BRACKETS ONTO THE END OF THE DOCK (FIGURE 1.1). CENTER THE BRACKETS ON THE END OF THE DOCK AND SPACE THEM 33-3/4" APART (FIGURE 1.2).

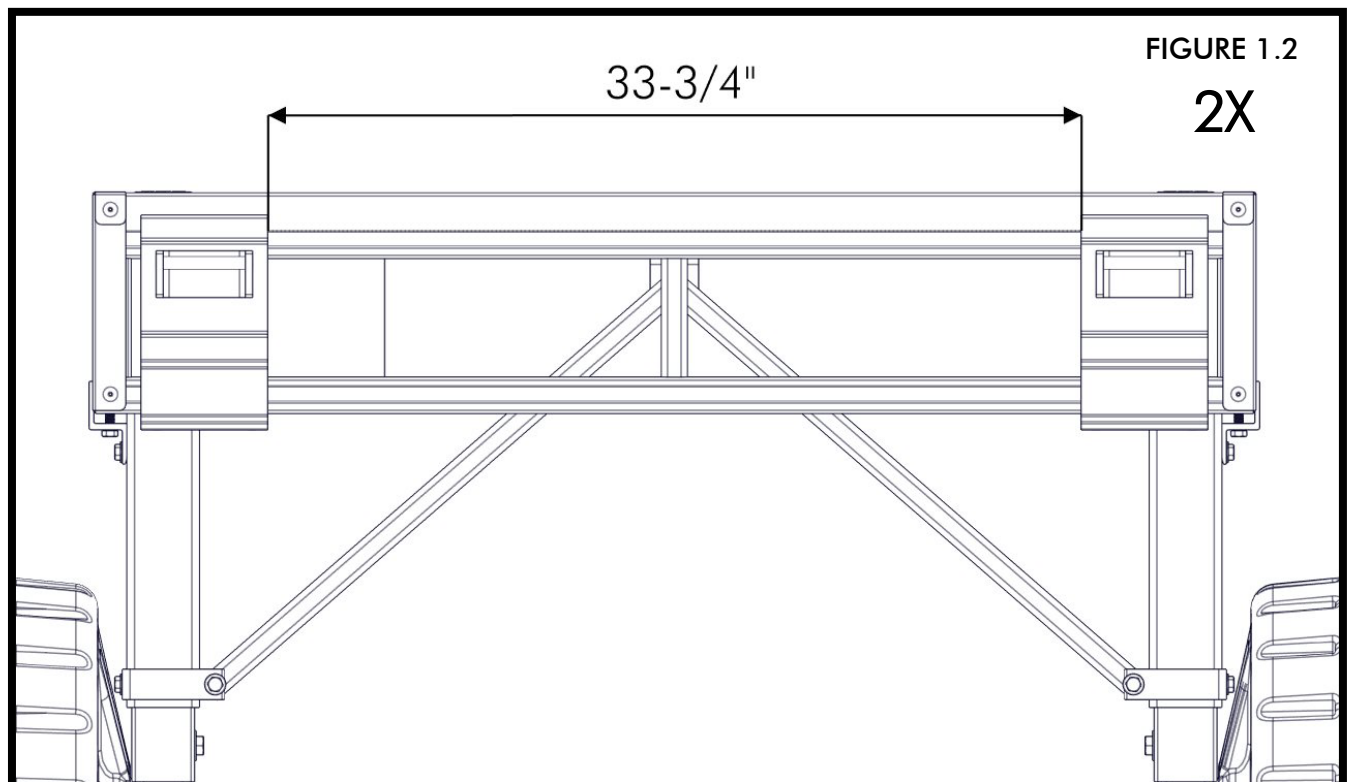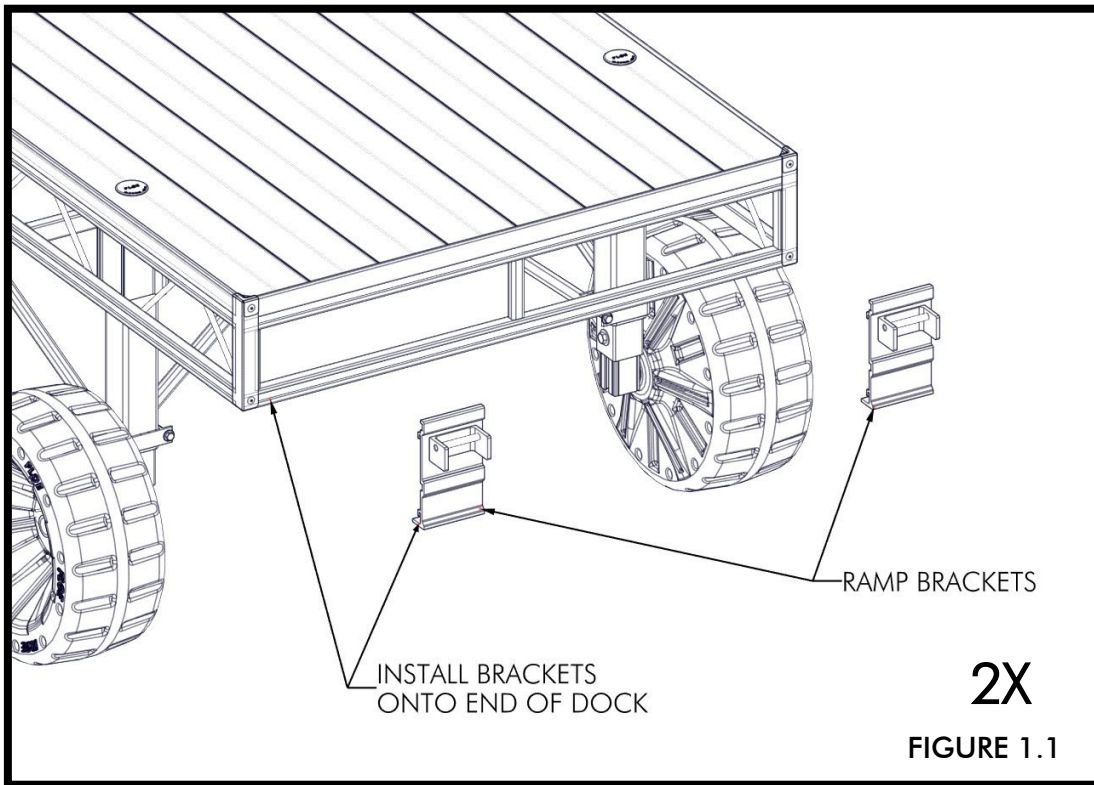

INSTALL (2) 3/8" X 1" BOLTS INTO THE BOTTOM OF EACH BRACKET (FIGURE 1.3) AND TORQUE TO **6 FT-LB MAXIMUM** (FIGURE 1.4). INSTALL THE RAMP ONTO THE BRACKETS (FIGURE 1.5). INSERT (1) 3/8" X 1" BOLT (INCLUDED WITH RAMP) INTO THE BOTTOM OF EACH RAMP HOOK (FIGURE 1.6) AND TORQUE TO 5 FT-LB (FIGURE 1.7).

