


FLOE CANOPY BIRD DETERRENCE KIT

ASSEMBLY INSTRUCTIONS

KIT P/N 511-00800-00

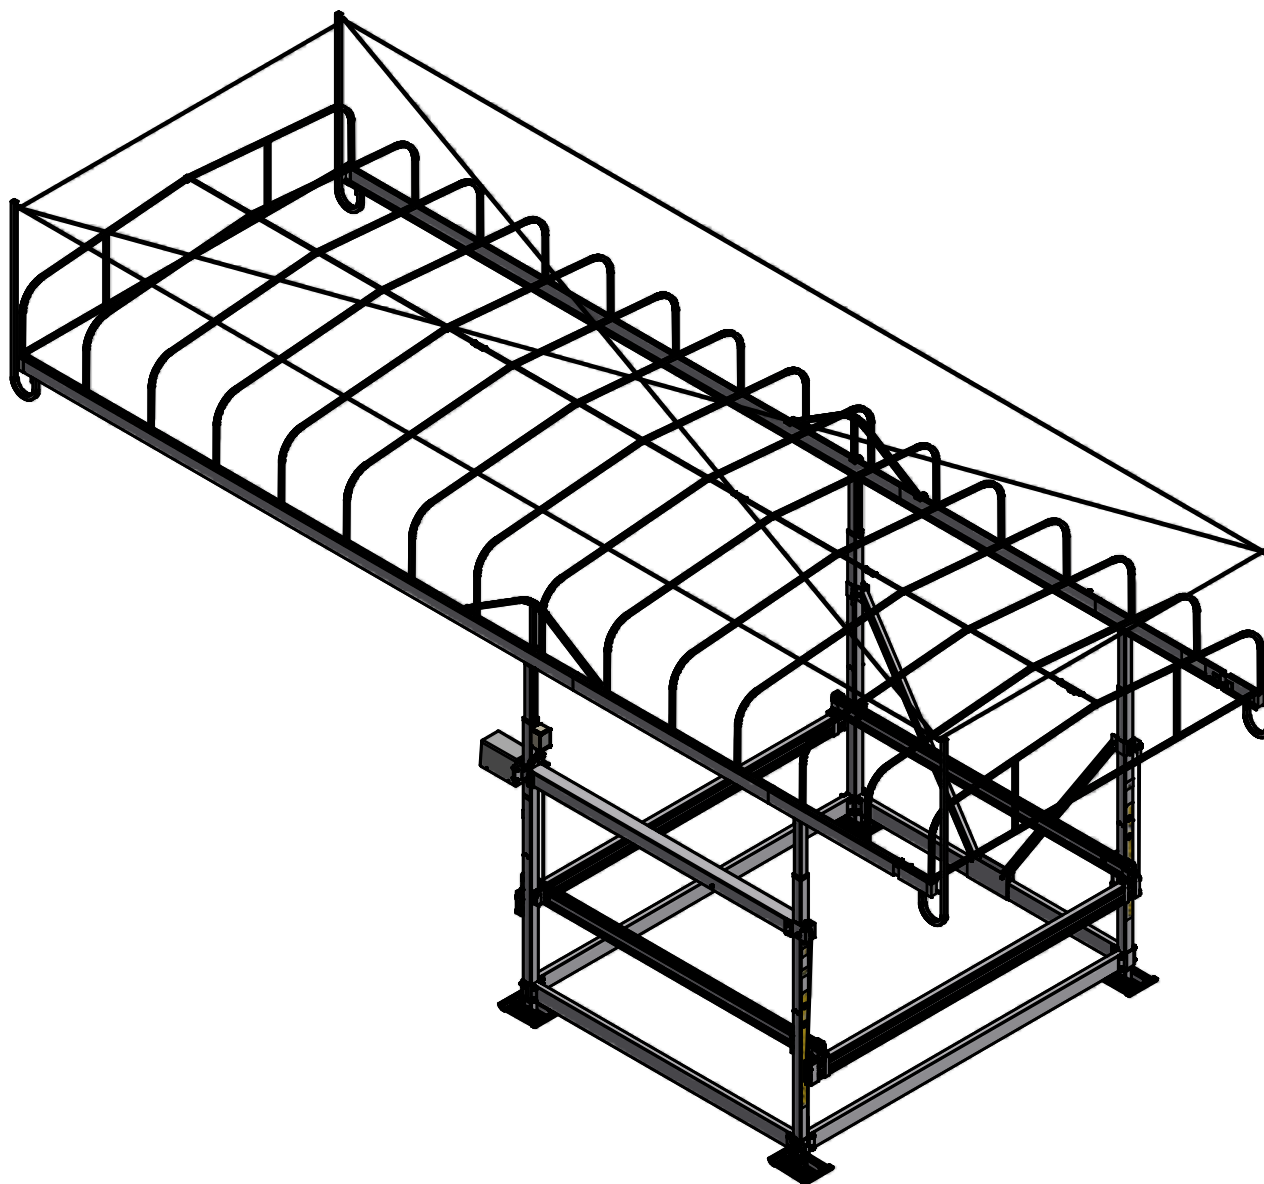

TOOLS REQUIRED

- TORQUE WRENCH
- 3/4 SOCKET OR WRENCH

Want the best? Go with the FLOE!

INSTRUCTION P/N 611-00800-00

ISSUED: 3/22/17

SHEET 1 OF 4


© Floe International, Inc.
48473 State Hwy. 65
McGregor, MN 55760
All rights reserved

FLOE CANOPY BIRD DETERRENCE KIT

EXPLODED VIEW AND BOM

KIT P/N 511-00800-00


| ITEM | QTY | PART NUMBER | DESCRIPTION |
|------|-----|--------------|-----------------------------|
| 1 | 4 | 001-70207-00 | HHCS, 1/2-13 SS |
| 2 | 4 | 001-76072-00 | NUT, NYLOCK 1/2-13 ALUM. |
| 3 | 1 | 011-00001-00 | LINE, BIRD DETERRENCE |
| 4 | 4 | 111-00124-00 | ASS'Y, MAST BIRD DETERRENCE |

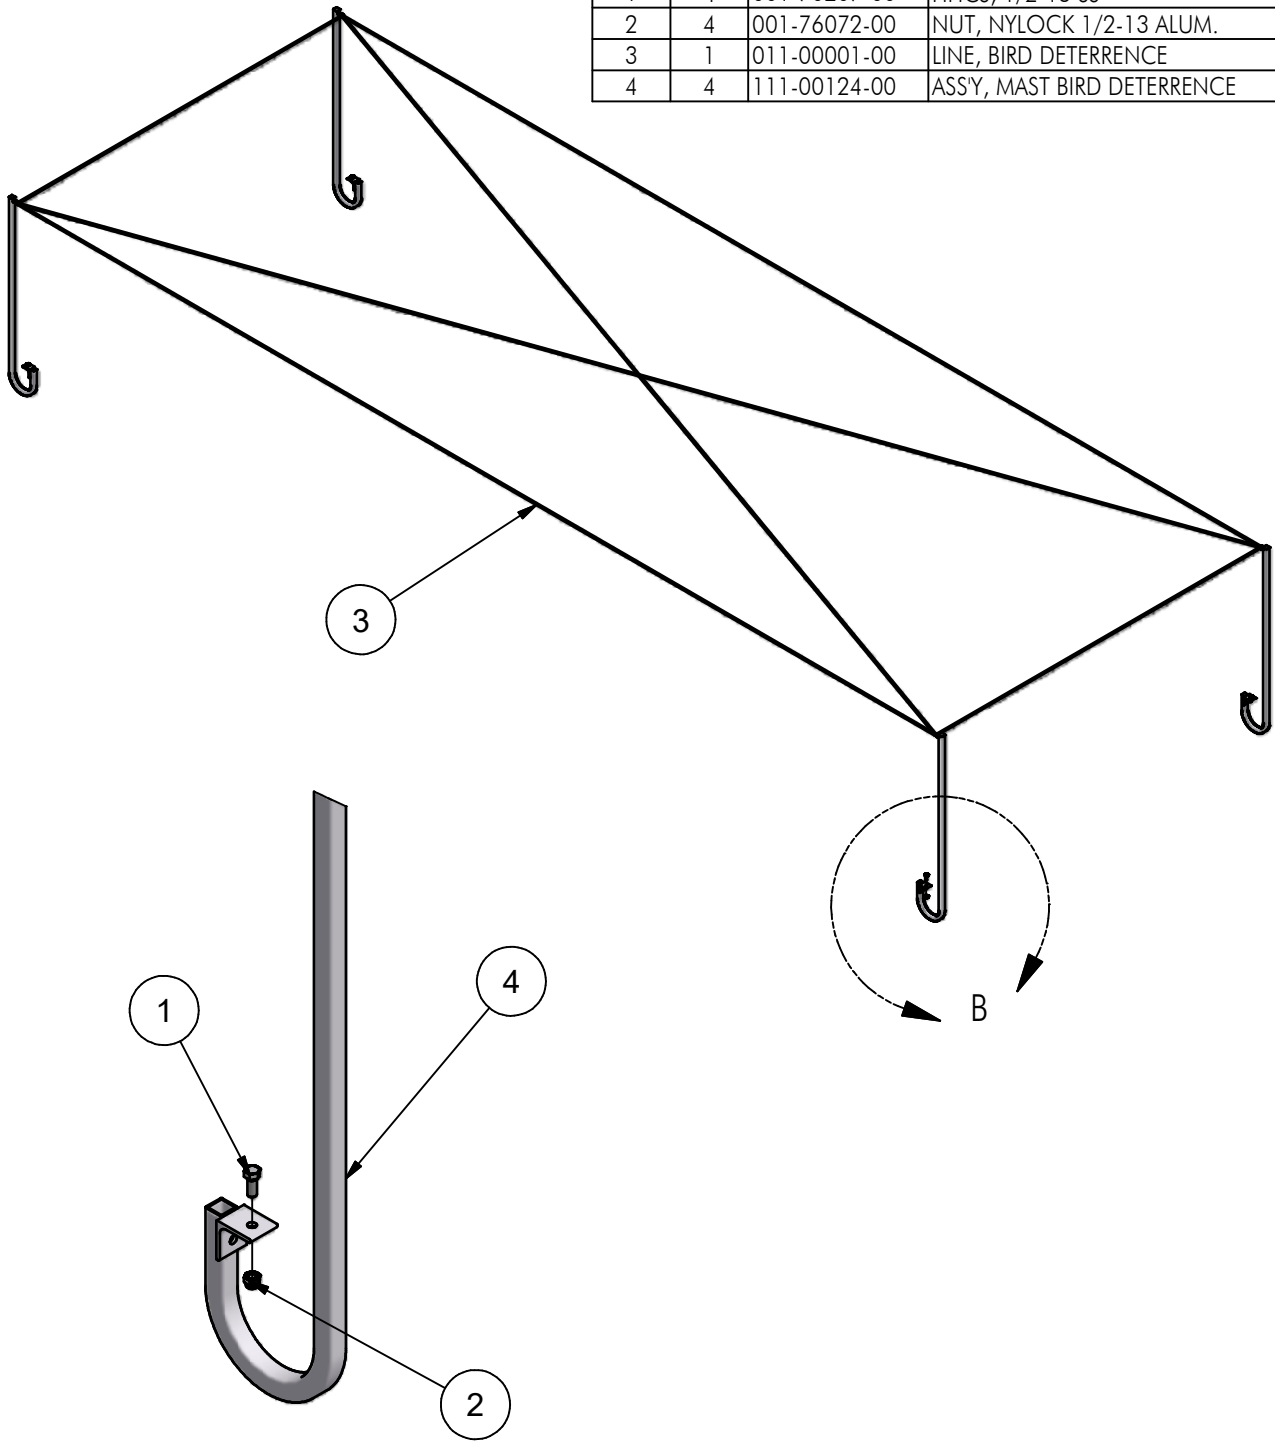

DETAIL B
SCALE 1 / 10

STEP 1

- PEEL BACK THE BOTTOM OF THE VINYL CANOPY RAIL CAP FAR ENOUGH TO INSERT A 1/2 X 1 1/4" BOLT INTO THE NUT TRACK OF THE CANOPY RAIL.
- PLACE THE MAST ASSEMBLY OVER THE BOLT AS SHOWN IN FIGURE 1 KEEPING THE ANGLE ON THE WELDMENT APPROXIMATELY 2" FROM THE END OF THE CANOPY RAIL. NOTE THERE SHOULD BE 2 - 3" OF OPEN AREA BETWEEN THE MAST UPRIGHT AND THE CANOPY HOOP. THIS INSURES ROOM FOR THE CANOPY FABRIC. THREAD ON THE 1/2" ALUMINUM NYLOCK NUT AND TORQUE TO 25 FT/LBS. REPEAT THREE MORE TIMES.

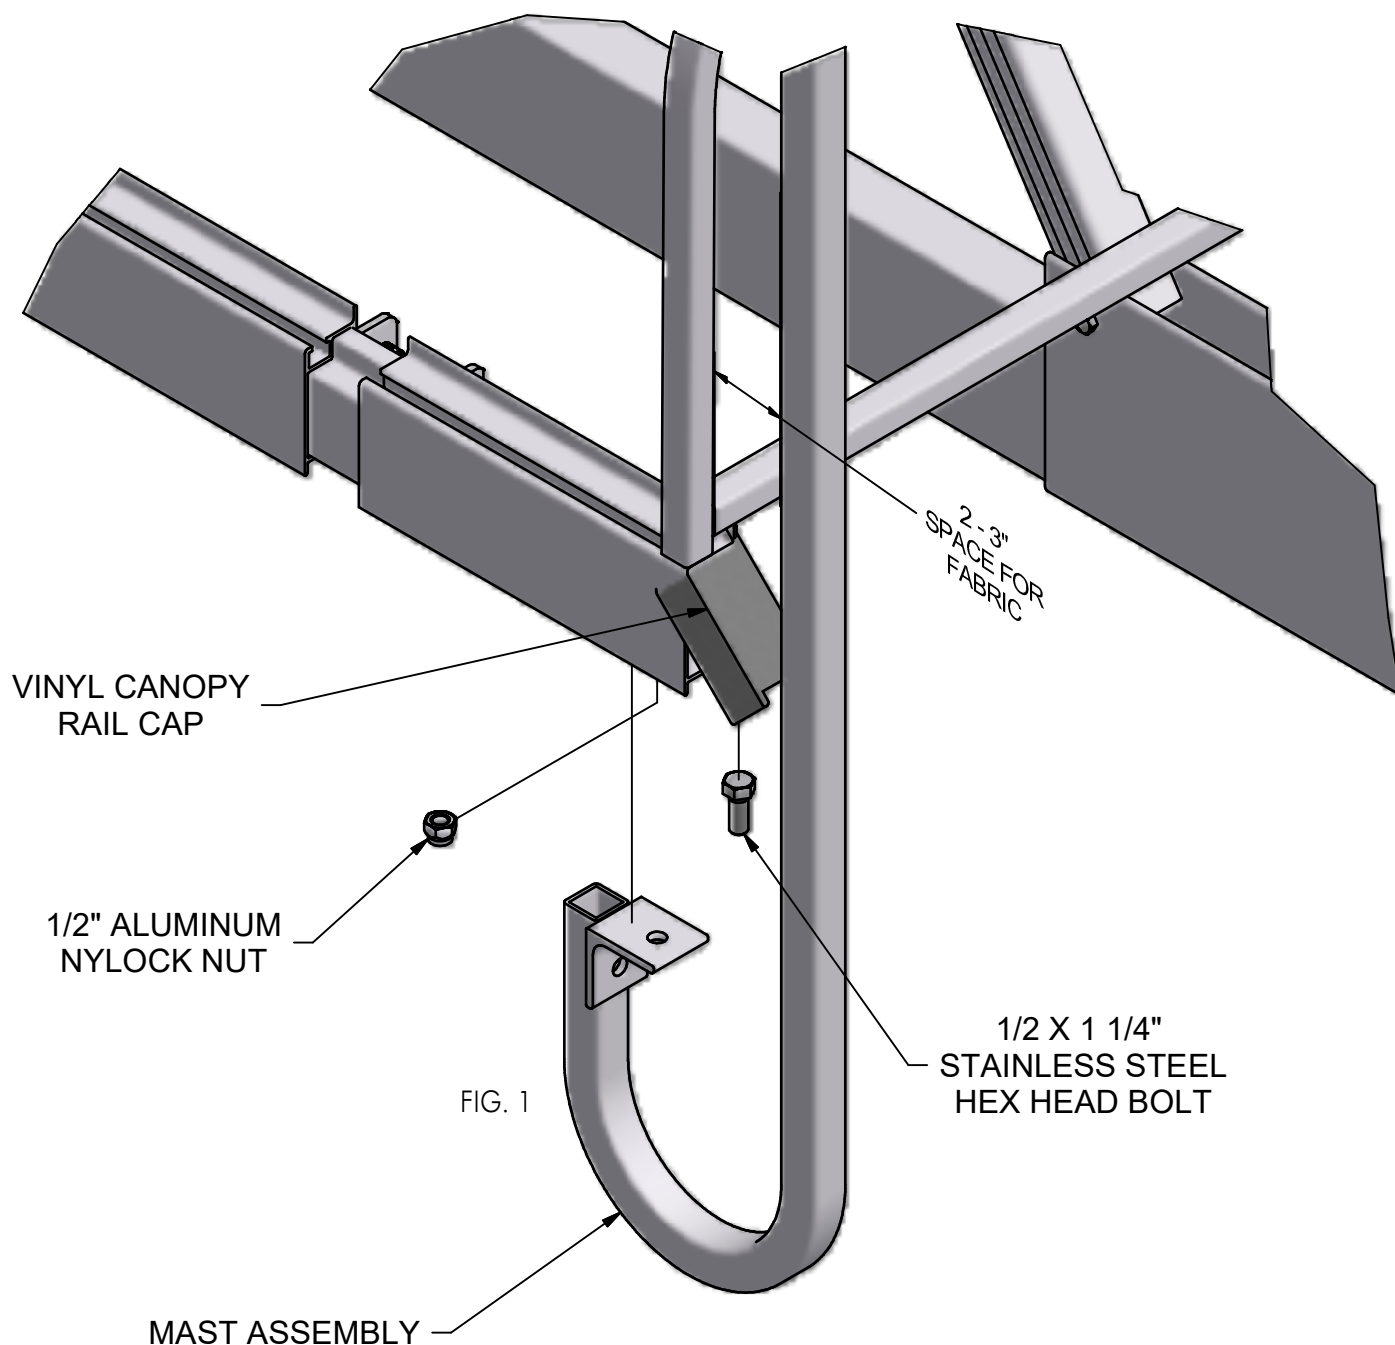

STEP 2

- STARTING AT POSITION 1, THREAD THE LOOSE END OF THE LINE THROUGH THE EYEBOLT WORKING THROUGH THE NUMBERED SEQUENCE INDICATED BELOW. ONCE LACED THROUGH ALL THE EYEBOLTS TIE THE LINE TO THE EYE BOLT AT POSITION # 8. NOTE: THE LINE WILL BE STRUNG TWICE FROM POSTION #2 TO #3 AND FROM POSTION #6 TO #7. WORKING BACKWARDS FROM EYE BOLT TO EYE BOLT BACK TO THE SPOOL, SNUG THE LINE. TIE OFF THE LINE SECURELY AT POSTION #1.

