

FLOE SHALLOW WHEEL KIT


P/N 510-17200-02 / 510-17210-02

ASSEMBLY INSTRUCTIONS AND OWNERS MANUAL FOR 4', 5', 6' & 8' WIDE DOCK SECTIONS


For use in approx. *13"- 30" of water



Manufactured by:
FLOE INTERNATIONAL, INC.
48473 State Hwy. 65
McGregor, MN 55760
www.floeintl.com

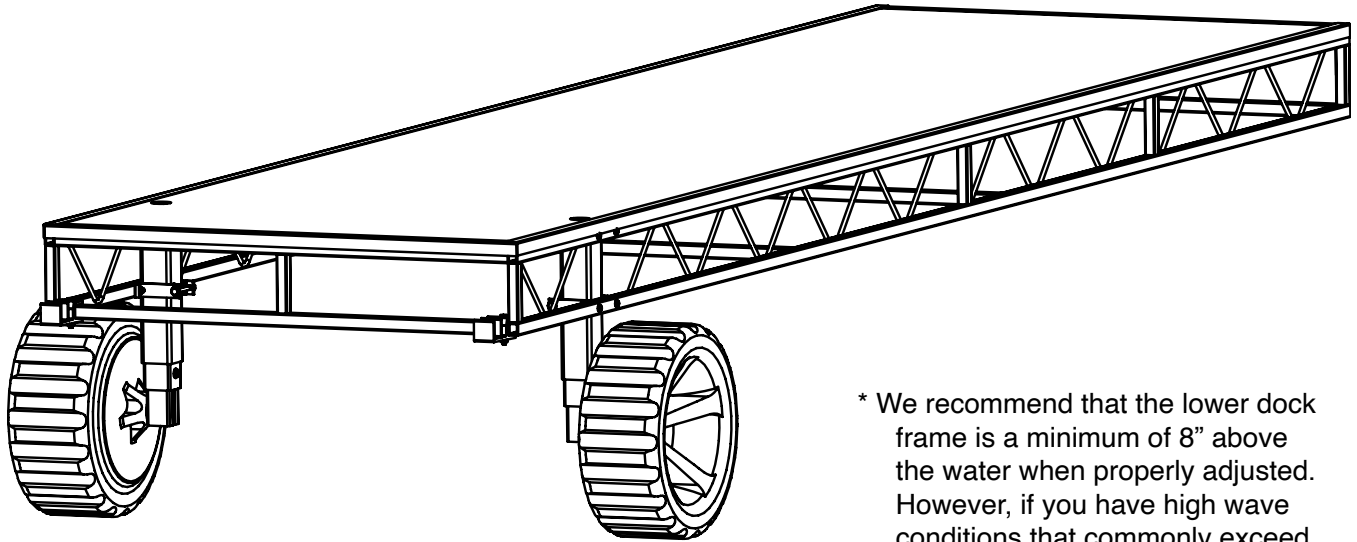

* We recommend that the lower dock frame is a minimum of 8" above the water when properly adjusted. However, if you have high wave conditions that commonly exceed 15" we recommend that you raise your dock accordingly.

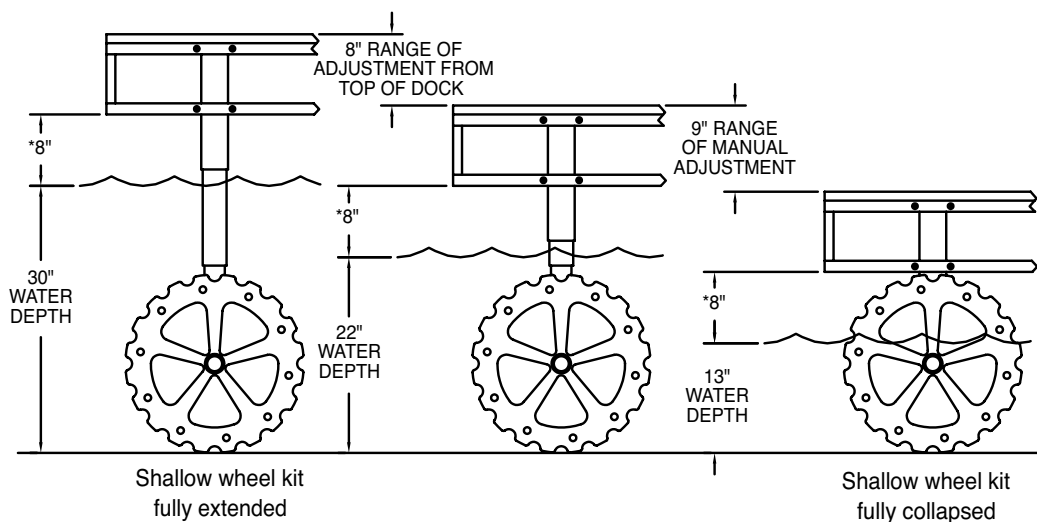

Tools Required:

- (2) 9/16" wrenches or sockets
- 7/32" allen wrench
- 2' square
- Cordless drill with socket adaptor and 1 1/8" socket or FLOE Speed Wrench

Pliers
Level




! WARNING !

Never adjust your dock legs with an impact wrench. Never adjust your dock legs with more than 15 ft/lbs of force. Applying too much force to your dock legs will damage the mechanism.


FLOE SHALLOW WHEEL KIT COMPONENT LIST (PAIR)

P/N 510-17200-02


Item	Part #	Qty	Description	Step #	
1	001-70113-00	2	3/8" x 2 1/2" bolt ss	3	Located in hardware kit
2	001-70119-00	4	3/8" x 4" bolt ss	1	
3	001-71017-00	10	3/8" SAE flat washer ss	1	
4	001-26728-00	2	Stainless steel spindle clip	2	
5	001-76349-00	6	3/8" aluminum nut	1	
6	006-13200-00	2	Plastic dock cap	3	
7	002-02080-00	2	Dock quick connect	3	Located in hardware kit
8	010-06001-00	2	Plastic dock wheel	2	
9	110-00210-02	2	Shallow wheel kit assembly	1	
10	010-00020-00	2	2 1/2" washers	2	

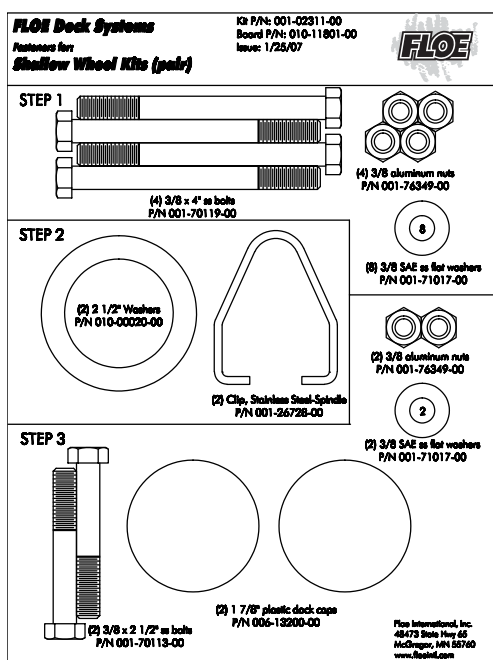


(1) Shallow hardware kit
P/N 001-02311-00

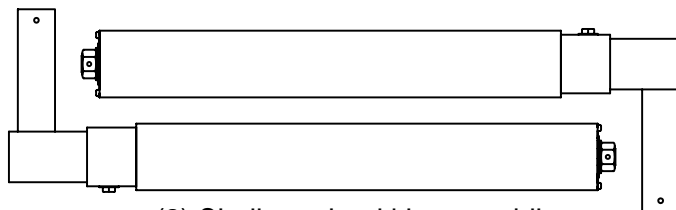

(2) Shallow wheel kit assemblies
P/N 110-00210-02

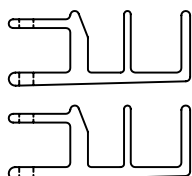


(2) Dock quick connects
P/N 002-02080-00

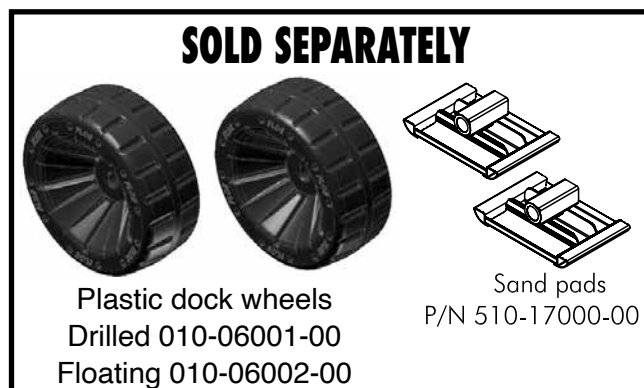

FLOE SHALLOW WHEEL KIT COMPONENT LIST (SINGLE)

P/N 510-17210-02

Item	Part #	Qty	Description	Step #	
1	001-70113-00	1	3/8" x 2 1/2" bolt ss	3	Located in hardware kit
2	001-70119-00	2	3/8" x 4" bolt ss	1	
3	001-71017-00	5	3/8" SAE flat washer ss	1	
4	001-26728-00	1	Stainless steel spindle clip	2	
5	001-76349-00	3	3/8" aluminum nut	1	
6	006-13200-00	2	Plastic dock cap	3	
7	002-02080-00	1	Dock quick connect	3	Located in hardware kit
8	010-06001-00	1	Plastic dock wheel	2	
9	110-00210-01	1	Shallow wheel kit assembly	1	
10	010-00020-00	1	2 1/2" washers	2	

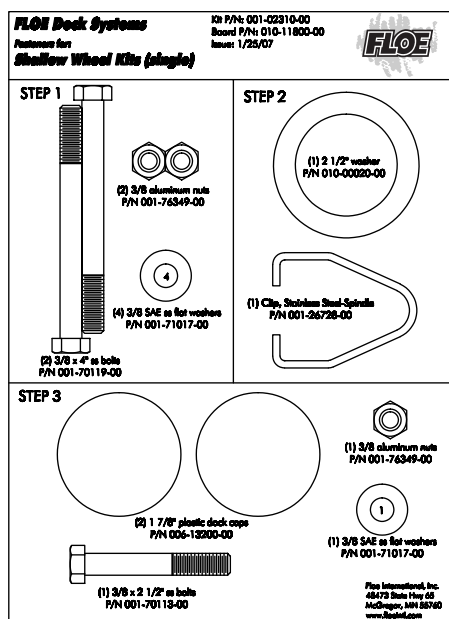

(1) Shallow hardware kit
P/N 001-02310-00



(1) Dock quick connects
P/N 002-02080-00



(1) Shallow wheel kit assemblies
P/N 110-00210-02

SOLD SEPARATELY





Sand pads
P/N 510-17000-00

Plastic dock wheels
Drilled 010-06001-00
Floating 010-06002-00


FLOE SHALLOW WHEEL KIT EXPLODED VIEW

4' WIDE DOCK SHOWN

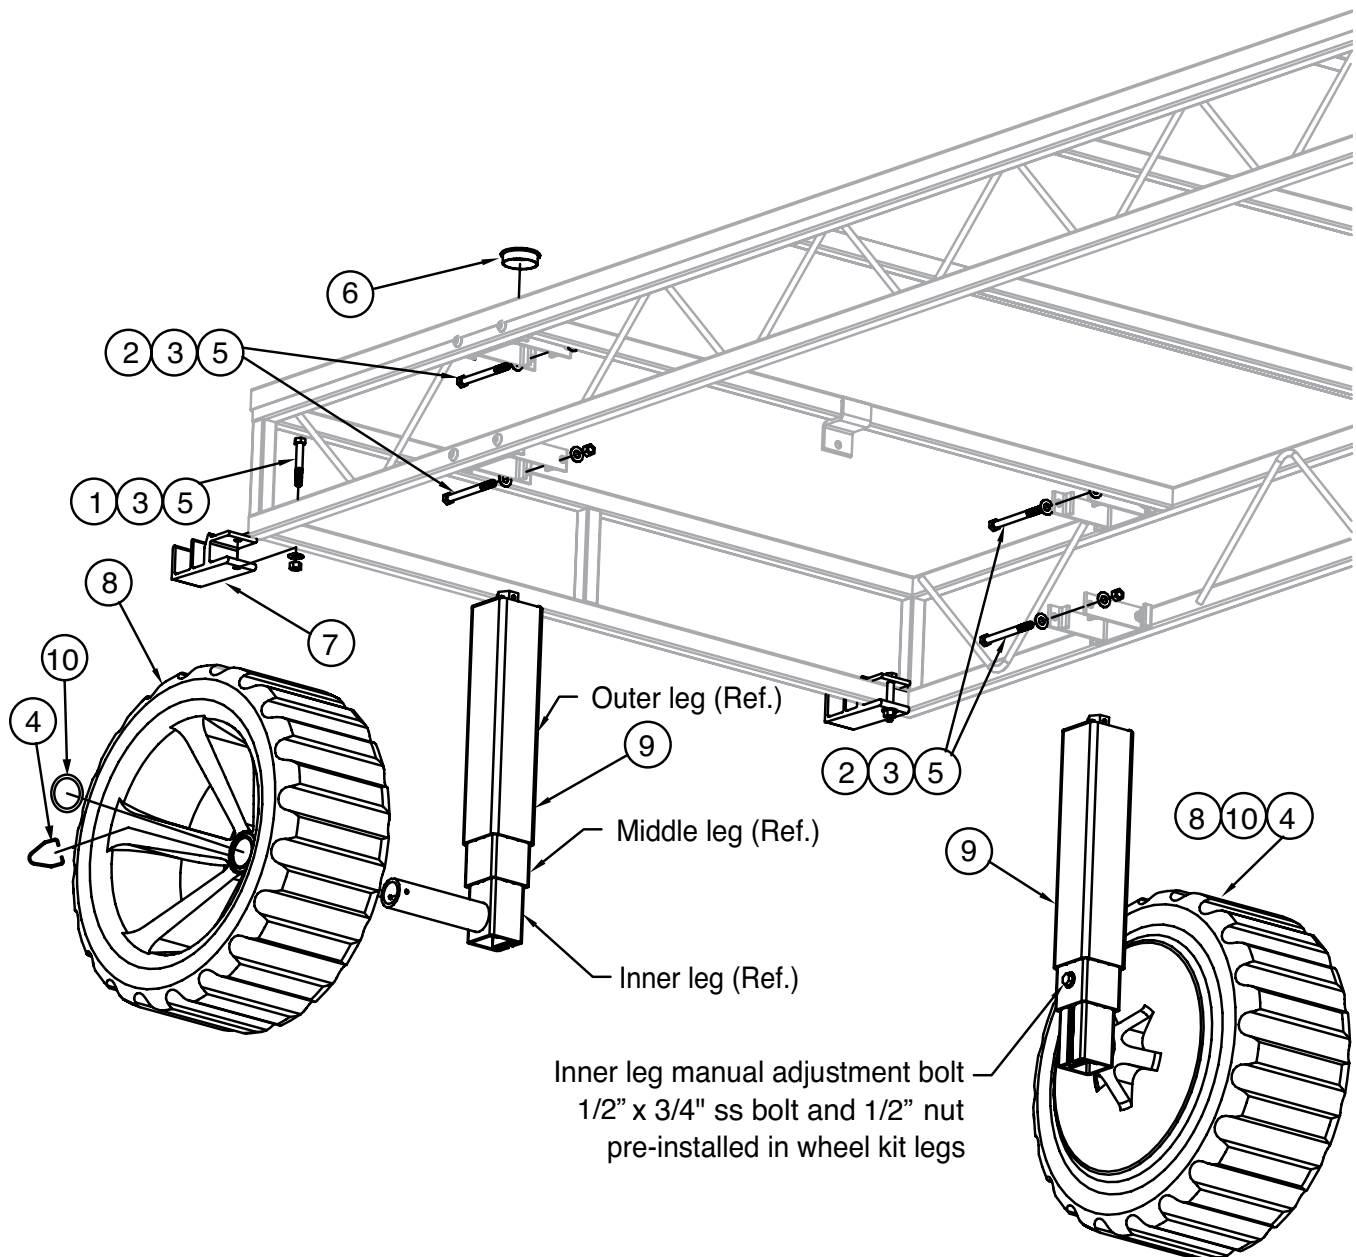


FLOE SHALLOW WHEEL KIT EXPLODED VIEW


8' WIDE DOCK SHOWN

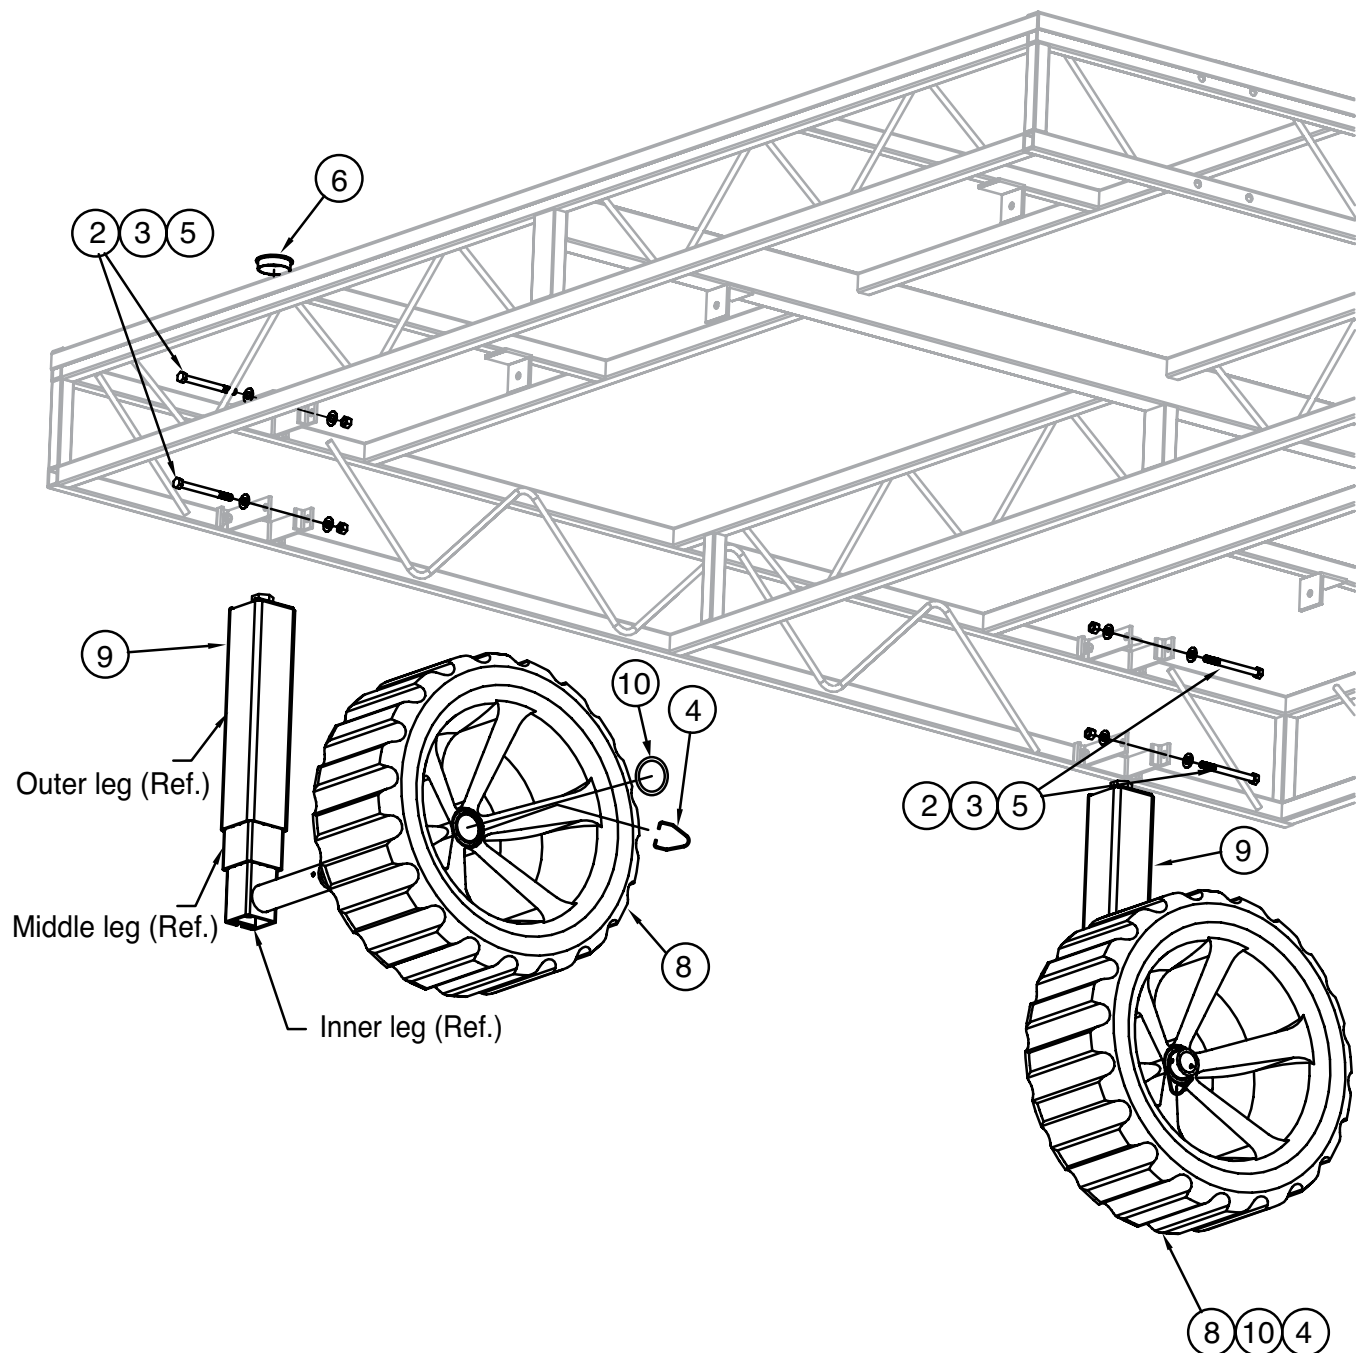

..... **NOTE**
Shown with wheels turned in

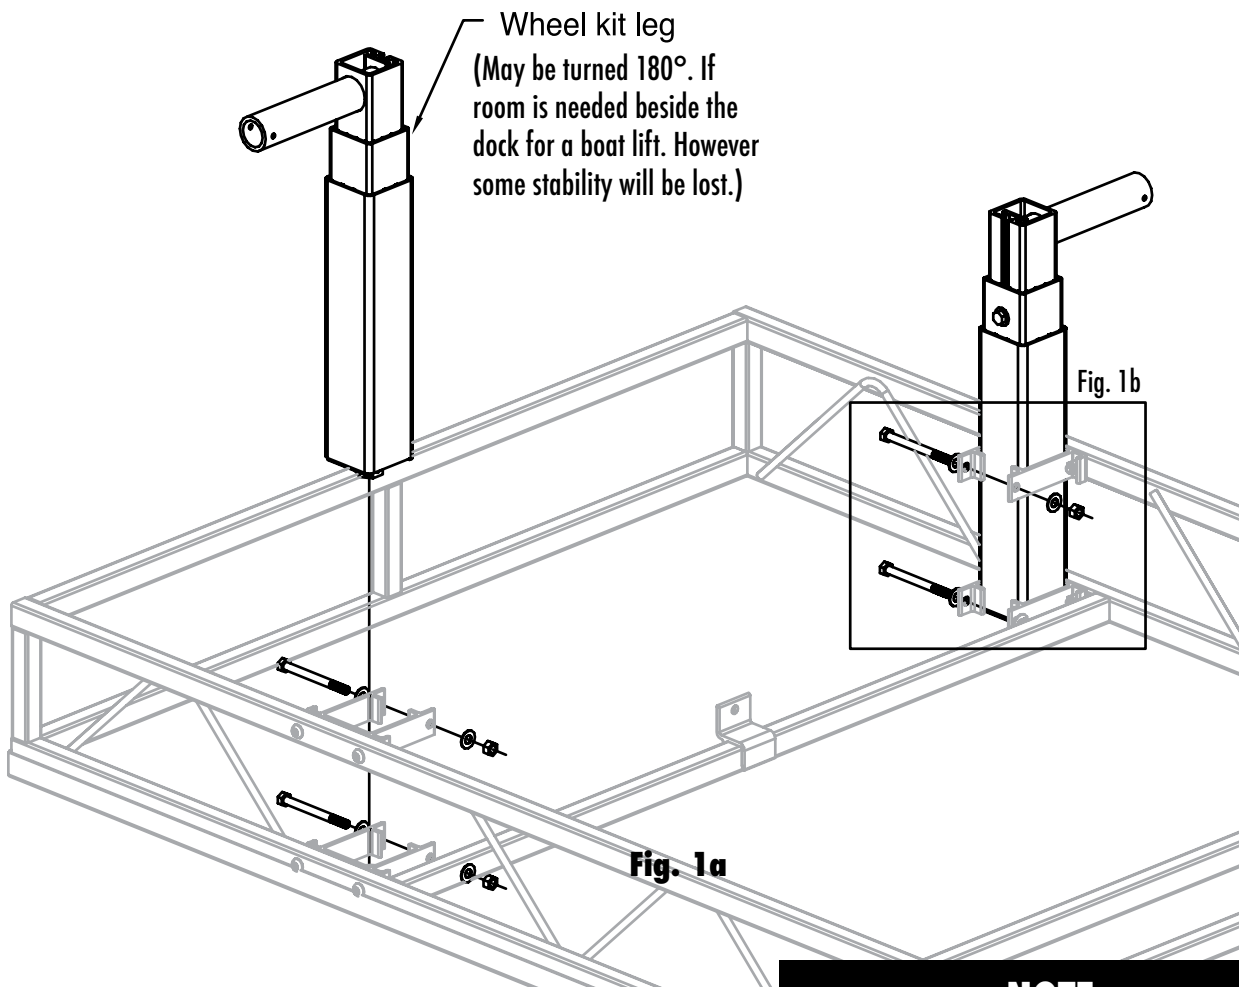

NOTE
 Diagrams show 4' wide dock sections.
 If you are attaching wheel kits to an 8'
 wide sundeck reference the exploded
 view on page 5.

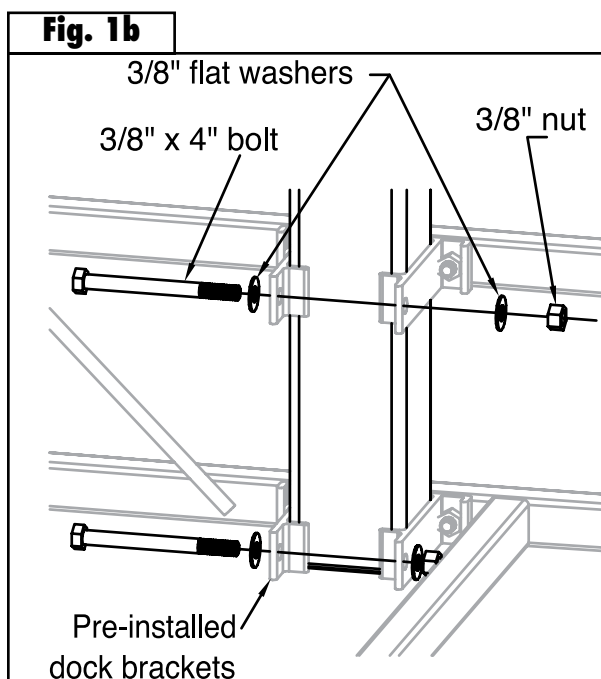

STEP 1

1. Turn dock upside down and block corners to protect the deck surface.
2. Under normal conditions wheel kits are mounted as shown in Fig. 1a with the wheels facing out. If necessary, wheel kits may be turned 180° for boat lift clearance. Refer to Dock Owners Manual for special conditions on setting up your dock.
3. Insert wheel kit legs into the brackets that are pre-installed on the dock.
4. Clamp the brackets to the legs using a 3/8" x 4" bolt, nut and (2) flat washers on each bracket. See Fig. 1b. Do not tighten bolts until both legs are assembled and all bolts are in.

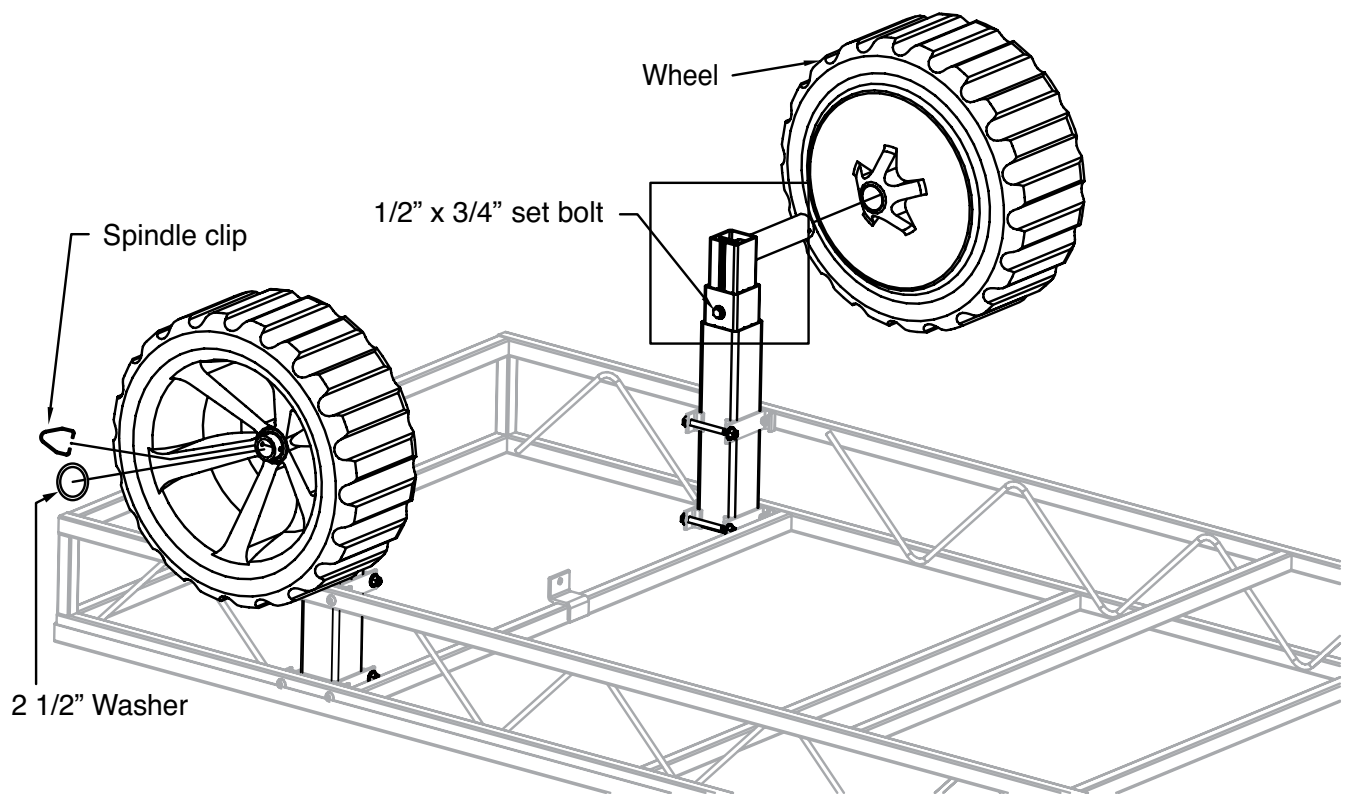


Fig. 2a

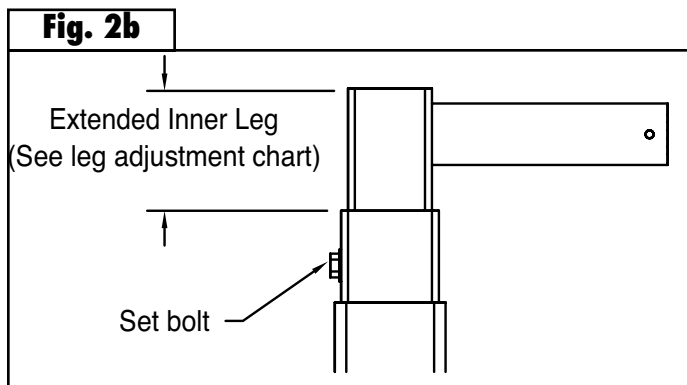


Fig. 2b

Leg Adjustment Chart	
**Water depth	Extend inner leg
13"-19"	2 5/8"
19"-25"	8"
25"-30"	13"

** When determining water depth, include the amount of settling that will occur if you have a soft or muddy lake bottom.

! WARNING !

Extending their inner wheel kit leg more than 13" can cause the dock to become unstable and reduce the structural integrity of the wheel kit.

STEP 2 - - - - -

1. Square the wheel kit leg(s) with the dock as shown in Fig. 2a and tighten all the nuts and bolts. Torque to 20 ft/lbs.
2. Slide the wheel(s) over the spindle on the wheel kit. Place a 2 1/2" washer over the spindle on the wheel kit. Insert leg of spindle clip in hole of leg spindle. Pull down on lower leg of clip until it snaps into the hole on the opposite side of leg spindle.
3. The inner leg should be adjusted now by loosening the set bolt as shown in Fig. 2b and extending the inner leg. See the chart below and Fig. 2b for approximate inner leg extension. Use this chart as a reference only. Never exceed 13" of extended length. Torque to 40 ft/lbs.

STEP 3 - - - - -

1. Turn dock right side up.
2. Attach quick connects to the wheel kit end of the dock section if another section is to be connected to it. To attach dock sections in a straight line quick connect should be assembled as shown in Fig. 3a. When another dock section connects to a side of the dock quick connects should be placed as shown in Fig. 3c. Torque to 30 ft/lbs. **Quick connects should be spread apart as far as possible to keep the joining section from shifting sideways.**
3. Place connecting dock sections in the quick connect installation/ removal position when installing or removing multiple sections. Push the docks into position in the water. Once the docks are in position, put them in the quick connects set position. See Fig. 3b.
4. Using a **FLOE** Speed wrench or 1 1/8" socket and wrench, adjust the height of the dock so the bottom frame of the dock is approximately 8" above the water. *See note on sheet 1. Turn the dock adjusting nut on the top of the dock clockwise to lower and counterclockwise to raise. Use a level to make sure all dock surfaces are level. See Fig 3c.
5. Once the dock is set in place and leveled, insert the plastic caps in adjustment nut hole as shown in Fig. 3c.

Fig. 3b

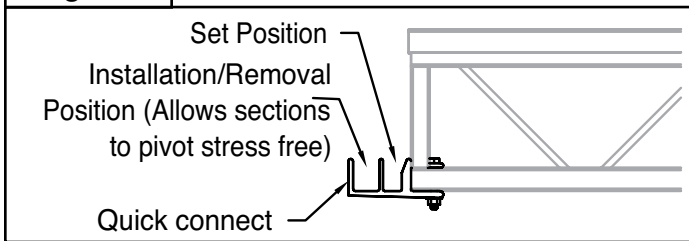


Fig. 3a


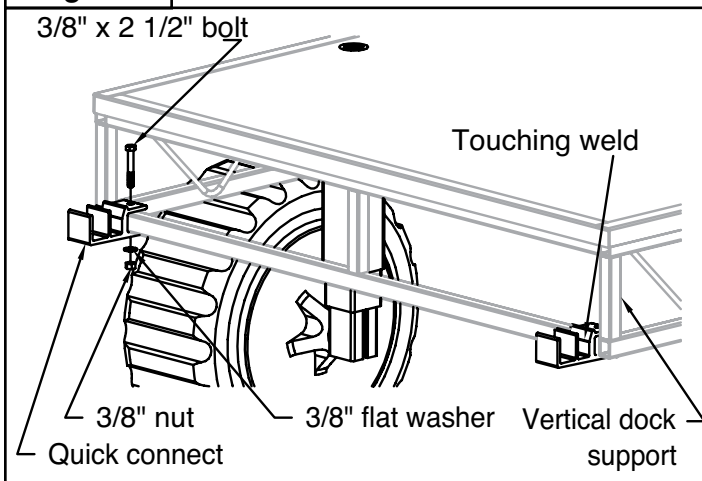


Fig. 3c

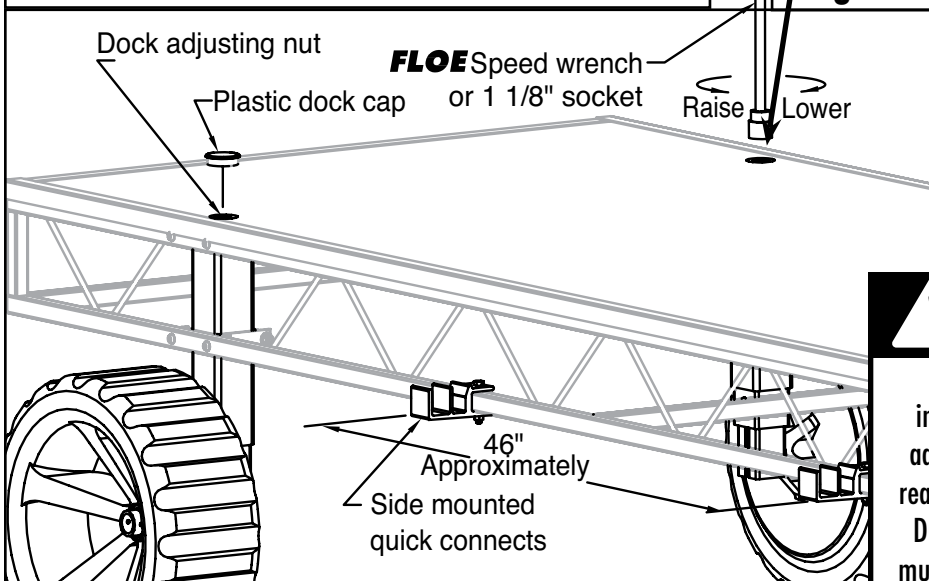

! WARNING !

Cordless drill may come to a sudden stop when the leg is fully extended or retracted. Be sure to have your cordless drill in clutch mode when adjusting the legs. Use of a corded drill may cause electrocution. Failure to use drill in clutch mode may cause injury to your hand or arm.

! WARNING !

Never adjust your dock legs with an impact wrench. If you can not turn the adjusting nut, do not force it - you have reached the end of the adjustment range. DO NOT exceed 15 ft/lbs. Applying too much force to your dock legs will damage the mechanism.

FLOE INTERNATIONAL, INC.

DOCK SYSTEM 15 YEAR LIMITED WARRANTY

FLOE INTERNATIONAL, INC. warrants, to the original purchaser, the FLOE dock system to be free from original defects in materials and workmanship under conditions and loads for which designed, and from the date of consumer purchase, (or if a demo, from the date of first service), as follows:

New Warranty Guidelines - Effective September 1, 2004

Two-Year Parts and Labor Warranty

FLOE INTERNATIONAL, INC. will repair or replace, at their option, any portion of the dock system which fails as a result of a defect in material or workmanship during the first two years after the date of purchase. Items purchased by FLOE INTERNATIONAL, INC. are warranted by the original manufacturer and warranty is extended only to the original retail purchaser. FLOE INTERNATIONAL, INC. reserves the right to inspect and perform repairs at its main facility (F.O.B.) McGregor, Minnesota. This full two-year warranty includes parts and labor on the dock system and accessories including the following:

Aluminum frame structure, wheel kits, leg bracing, support poles, quick-connects, benches, ladders, and bumpers.

Labor charges and mileage covered within 15 miles from FLOE or the authorized FLOE dealership performing the repairs. Additional mileage/travel charges will apply if travel over 15 miles is required. This charge is determined by the repairing dealer and must be paid by the customer to the dealer performing the repairs. Warranty does not cover damage, including broken welds, caused by improper handling, installation or removal, or any damage of any sort caused by the use of power equipment, such as vehicles used to remove docks.

Extended Parts Warranty

In addition to this two-year parts and labor warranty, additional warranty coverage applies to specific parts of the dock and accessories. All warranty coverage beyond two years is for parts only. Labor costs for any warranty claim are not covered past two years.

Aluminum Dock Frame & Aluminum Dock Deck – 15-Year Limited Warranty

Defects in material and workmanship of structural components of the dock frame and deck are covered for 10 years from the date of purchase (excluding paint finish). FLOE will provide replacement parts, on a non pro-rated basis, for ten years from the date of purchase for these items if they are found to be defective in workmanship. After this 10-year parts warranty, an additional five-year pro-rated warranty covers these components as shown below. Aluminum decking warranty does not include paint wear, scratches or denting.

Year After Purchase	Consumer Portion of Current Retail Price
11	40%
12	50%
13	60%
14	70%
15	90%

Carpet and Cedar Dock Decking

With the following exceptions, carpet, cedar and color fade dock decking is covered by the full two-year parts and labor warranty (above). On cedar decks, cracks and splintering are normal characteristics of wood and are not covered by this warranty. There is no further warranty over the two years on cedar deck docks.

In addition to the two-year warranty, carpet docks are warranted to be free from defects in material and workmanship on a pro-rated basis, for up to 10 years as shown below. Warranty does not cover fading, mildew, or wear.

Year After Purchase	Consumer Portion of Current Retail Price	Year After Purchase	Consumer Portion of Current Retail Price
3-5	0%	8	60%
6	40%	9	70%
7	50%	10	90%

Dock Accessories and Wheel Kit — 10-Year Limited Warranty

Defects in material and workmanship of certain accessories of FLOE dock systems are covered under a 10-year pro-rated warranty. Items covered in this 10-year pro-rated warranty include wheel kit legs, wheel kit braces, plastic wheels, benches (except cedar boards), bumpers, ladders, shore-end ramps (except cedar boards), support poles, and hammocks.

The pro-rated schedule of these items is as follows:

Year After Purchase	Consumer Portion of Current Retail Price	Year After Purchase	Consumer Portion of Current Retail Price
3	20%	7	60%
4	30%	8	70%
5	40%	9	80%
6	50%	10	90%

Dock Floats — 12-Year Limited Warranty

Dock floats used on FLOE floating dock systems are warranted to the original owner against cracking, peeling, sloughing, and deterioration from ultraviolet rays, while retaining its resiliency against ice and bumps by watercraft under normal usage.

This warranty does not cover any float drum that has been subject to negligence, misuse, alterations, accidents, storm abuse or improper installation and support.

Floats are covered in the two-year parts and labor warranty. In addition, FLOE will provide replacement floats on a non pro-rated basis for the first eight years and then pro-rated as below. Replacement labor not included.

Year After Purchase	Consumer Portion of Current Retail Price
9	60%
10	70%
11	80%
12	90%

This warranty covers only the cost for replacement of materials due to defects in materials or workmanship, and represents the only warranty authorized by us. In order to receive performance under this warranty, all warranty repairs must be authorized in advance by FLOE INTERNATIONAL, INC.

Additional Warranty Information Including Exclusions and Owner's Rights

FLOE INTERNATIONAL, INC. will not be responsible for any costs incurred for unauthorized repairs or improper assembly. Unauthorized repairs may void the warranty on items repaired! Warranty repairs are subject to a \$20.00 customer (consumer) deductible co-payment. This warranty does not cover damage resulting from overloading of the boat lift, misuse, wind, storm or ice damage, (or any act of God), being struck by any type of watercraft, or negligence. This warranty covers personal use and does not apply to commercial or rental use. The manufacturer is not responsible for damage where repairs have been made or attempted by others. Items purchased by FLOE INTERNATIONAL, INC. are warranted by the original manufacturer and warranty is extended only to the original retail purchaser. FLOE INTERNATIONAL, INC. reserves the right to inspect and perform repairs at its main facility (F.O.B.) McGregor, Minnesota. The customer is responsible for freight charges incurred in transporting the warranty product to and from FLOE or an authorized FLOE dealership, with the exception of claims covered by the two-year parts and labor warranty that provides service up to 15 miles from the dealer. FLOE INTERNATIONAL reserves the right to inspect and perform rework at its main facility (F.O.B.) McGregor, Minnesota. Specifications may change without notice or obligation.

Completing & Submitting Your Warranty Claim

To receive performance under this warranty, contact your authorized FLOE dealer. Be prepared to provide the following information so that the dealer can complete a warranty claim form: receipt and date of purchase; your name, address and telephone numbers; the serial or vehicle identification numbers; and a detailed description of the problem.

THERE ARE NO OTHER EXPRESSED OR IMPLIED WARRANTIES

Our obligations under this warranty are limited to repair or replacement at our discretion, and FLOE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND.

This Warranty gives you specific legal rights and you may have other rights which may vary from state to state.

page 2 of 2

